

# Honeywell

krom  
schroder

## Pressure regulators with solenoid valve VAD, VAG, VAV Flow rate regulators VAH, VRH Pressure regulators with double solenoid valve VCD, VCG, VCV, VCH

### TECHNICAL INFORMATION

- All-purpose servo regulator for gaseous media with integrated safety valve
- Suitable for a max. inlet pressure of 500 mbar (7 psig)
- Minimum installation effort: no external impulse line required
- Can be adjusted from two sides



CE



ERC



PL

SIL



# Contents

<b>Contents</b> .....	<b>2</b>	<b>5 Selection</b> .....	<b>26</b>
<b>1 Application</b> .....	<b>4</b>	5.1 ProFi .....	26
1.1 Application examples .....	6	5.2 VAD selection table .....	27
1.1.1 Constant pressure control .....	7	5.3 VAG, VAH, VAV selection table .....	28
1.1.2 Constant pressure control with two gas solenoid valves .....	7	5.4 VRH selection table .....	29
1.1.3 Constant pressure control with max. pressure switch .....	7	5.5 Type code .....	30
1.1.4 Constant pressure control with non-controlled pilot gas outlet .....	7	5.6 Accessory selection .....	31
1.1.5 Modulating control .....	8	<b>6 Project planning information</b> .....	<b>32</b>
1.1.6 Modulating control with two gas solenoid valves .....	8	6.1 Test points .....	32
1.1.7 Modulating control with two gas solenoid valves and inlet pressure switch .....	9	6.2 Installation .....	33
1.1.8 High/Low control .....	9	6.2.1 Installation position .....	34
1.1.9 Zero pressure control .....	9	6.3 Setting the low-fire rate on VAG, VAH, VRH, VAV .....	34
1.1.10 Staged flow rate control .....	10	6.4 Setting the high-fire rate on VAV .....	35
1.1.11 Continuous or staged flow rate control .....	10	6.5 Electrical connection .....	35
1.1.12 Modulating control with variable air/gas ratio control with gas solenoid valve .....	11	<b>7 Accessories</b> .....	<b>36</b>
1.1.13 Modulating control in residential heat generation .....	11	7.1 Pressure switch for gas DG..C .....	36
<b>2 Certification</b> .....	<b>12</b>	7.2 DG..C fastening set for VAX 1–3 .....	36
<b>3 Function</b> .....	<b>14</b>	7.3 Bypass/pilot gas valve VAS 1 .....	37
3.1 Pressure regulator for gas VAD .....	14	7.3.1 Flow rate, VAS 1 attached to VAX 1, VAX 2, VAX 3 .....	37
3.2 Air/gas ratio control VAG .....	15	7.3.2 Scope of delivery of VAS 1 for VAX 1, VAX 2, VAX 3 .....	38
3.3 Flow rate regulators VAH, VRH .....	15	7.4 Bypass/pilot gas valve VBY 8 .....	39
3.4 Variable air/gas ratio control VAV .....	16	7.4.1 Flow rate, VBY .....	39
3.5 Pressure regulator with gas solenoid valve VAX..S and closed position indicator .....	17	7.4.2 Technical data VBY 8 .....	40
3.6 Connection diagram .....	18	7.4.3 Scope of delivery of VBY for VAX 1 .....	40
<b>4 Flow rate</b> .....	<b>19</b>	7.4.4 Type code .....	40
4.1 Calculating the nominal size .....	19	7.5 Pressure test nipples .....	41
4.2 VAD .....	20	7.6 Cable gland set .....	41
4.3 VAG, VAH, VRH, VAV .....	22	7.7 Attachment block VA 1–3 .....	41
4.4 Zero governor VAG..N .....	24	7.8 Seal set for sizes 1–3 .....	42
4.4.1 Calculating the nominal size .....	25	7.9 Differential pressure orifice .....	42
		7.10 Measuring orifice VMO .....	43
		7.11 Filter module VMF .....	43
		7.12 Fine-adjusting valve VMV .....	43


7.13 Gas control line . . . . .	43
<b>8 Technical data . . . . .</b>	<b>44</b>
8.1 Ambient conditions . . . . .	44
8.2 Mechanical data . . . . .	44
8.3 Electrical data . . . . .	45
<b>9 Dimensions . . . . .</b>	<b>47</b>
9.1 Rp internal thread, ISO flange . . . . .	47
9.2 NPT internal thread, ANSI flange . . . . .	48
<b>10 Converting units . . . . .</b>	<b>49</b>
<b>11 Safety-specific characteristic values for SIL and PL . . . . .</b>	<b>50</b>
11.1 Determining the PFH <sub>D</sub> value, λ <sub>D</sub> value and MTTF <sub>d</sub> value . . . . .	50
11.2 Designed lifetime . . . . .	51
11.3 Use in safety-related systems . . . . .	51
<b>12 Safety information in accordance with EN 61508-2 . . . . .</b>	<b>52</b>
12.1 Scope of application . . . . .	52
12.2 Product description . . . . .	52
12.3 Reference documents . . . . .	52
12.4 Applicable standards . . . . .	52
12.5 Safety function . . . . .	52
12.6 Safety instructions concerning operating limits . . . . .	52
12.7 Installation and commissioning . . . . .	52
12.8 Maintenance/Checks . . . . .	52
12.9 Troubleshooting . . . . .	52
12.10 Safety instructions concerning design verification . . . . .	52
12.11 Characteristic safety data/SIL capability . . . . .	53
12.12 Mode of operation . . . . .	53
<b>13 Maintenance cycles . . . . .</b>	<b>54</b>

<b>14 Glossary . . . . .</b>	<b>55</b>
14.1 Diagnostic coverage DC . . . . .	55
14.2 Mode of operation . . . . .	55
14.3 Category . . . . .	55
14.4 Common cause failure CCF . . . . .	55
14.5 Fraction of undetected common cause failures β . . . . .	55
14.6 B <sub>10d</sub> value . . . . .	55
14.7 T <sub>10d</sub> value . . . . .	55
14.8 Hardware fault tolerance HFT . . . . .	55
14.9 Mean dangerous failure rate λ <sub>D</sub> . . . . .	55
14.10 Safe failure fraction SFF . . . . .	56
14.11 Probability of dangerous failure PFH <sub>D</sub> . . . . .	56
14.12 Mean time to dangerous failure MTTF <sub>d</sub> . . . . .	56
14.13 Demand rate n <sub>op</sub> . . . . .	56
14.14 Average probability of dangerous failure on demand PFD <sub>avg</sub> . . . . .	56
<b>For more information . . . . .</b>	<b>57</b>

# 1 Application

Regulators with solenoid valves are designed for shut-off, and thanks to the servo technology, for precise control of the gas supply to gas burners and gas appliances. They are used in gas control and safety systems in all sectors of the iron, steel, glass and ceramics industries, as well as in residential or commercial heat generation, such as the packaging, paper and foodstuffs industries.


## VAD

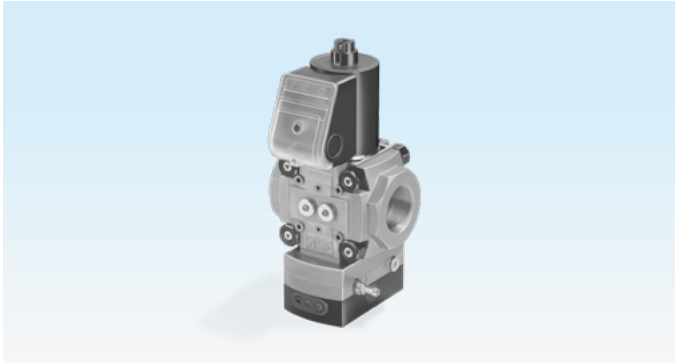

VAD

Constant pressure governor, Class A, with high control accuracy, for excess air burners, atmospheric burners or single-stage force draught burners. The pressure is preset via the setpoint spring. In the case of fluctuating furnace or kiln pressures, the furnace chamber pressure may also be connected for maintaining a constant burner capacity.


## VAG

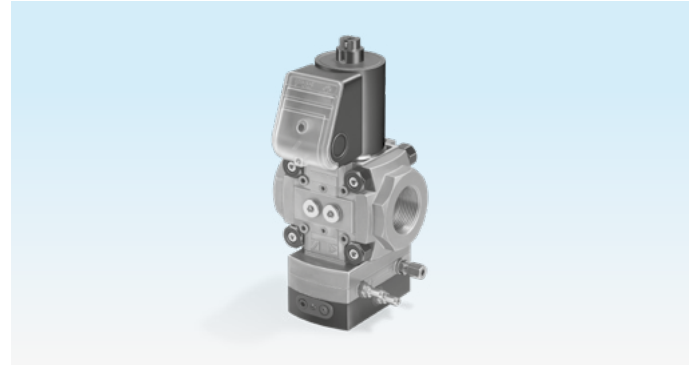

VAG

Air/gas ratio control, Class A, for maintaining a constant air/gas pressure ratio for modulating-controlled burners or with VAS 1 bypass valve for stage-controlled burners. The pressure is preset by the air control line. The VAG..N can also be used as a zero governor for gas engines.

**VAH, VRH**

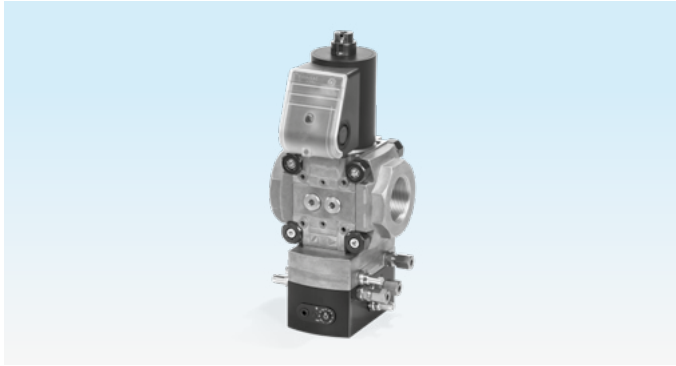

VAH



VRH

Flow rate regulators VAH and VRH are used to maintain a constant gas/air ratio for modulating-controlled and stage-controlled burners. The gas flow rate is controlled proportionally to the air flow rate.

In addition, flow rate regulator VAH is designed as a gas solenoid valve and shuts off the gas or air supply safely.

**VAV**



VAV

Variable air/gas ratio control, Class A, for maintaining a constant gas/air pressure ratio for modulating-controlled burners. The pressure is preset by the air control line. The ratio of gas pressure to air pressure remains constant. It can be set from 0.6:1 to 3:1. Pressure fluctuations in the combustion chamber can be compensated via the combustion chamber control pressure.

## 1.1 Application examples



*Pressure regulator on excess air burners in the ceramics industry*




*Air/gas ratio control on melting furnace for ensuring stoichiometric combustion over the entire capacity range*




*Aluminium age-hardening furnace with air/gas ratio controls for low air pressure protection*

### 1.1.1 Constant pressure control

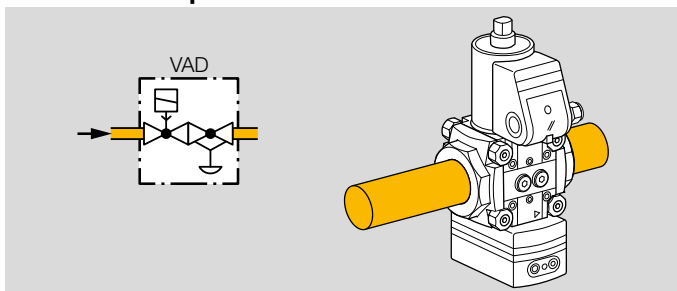


The pressure regulator with gas solenoid valve VAD maintains the set gas outlet pressure  $p_d$  constant when subject to differing flow rates. If a second gas solenoid valve is used upstream of the VAD, this complies with the requirements of EN 746-2 for two Class A gas solenoid valves connected in series.

### 1.1.2 Constant pressure control with two gas solenoid valves

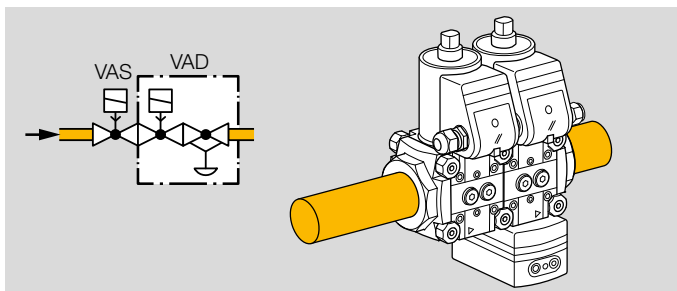


The pressure regulator with gas solenoid valve VAD maintains the set gas outlet pressure  $p_d$  constant when subject to differing flow rates.

### 1.1.3 Constant pressure control with max. pressure switch

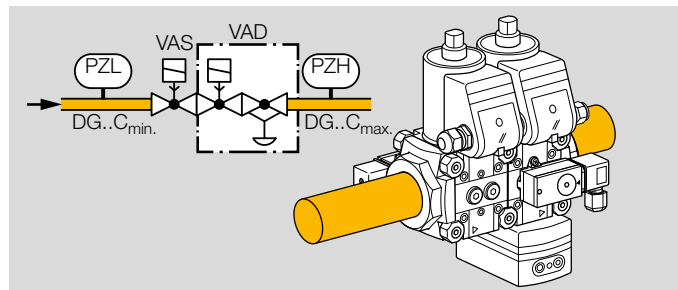


In this example, the minimum inlet pressure  $p_u$  and the maximum outlet pressure  $p_d$  are monitored with the pressure switches DG..C. The simple attachment of the pressure switch module makes installation easier.

### 1.1.4 Constant pressure control with non-controlled pilot gas outlet

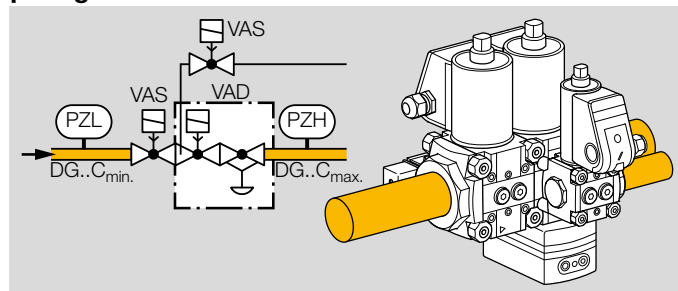

In this application, the pilot burner is supplied with a high inlet pressure via the pilot gas outlet. The simple attachment of the bypass valve module makes installation easier. The minimum inlet pressure  $p_u$  and the maximum outlet pressure  $p_d$  are monitored with the pressure switches DG..C.


### 1.1.5 Modulating control

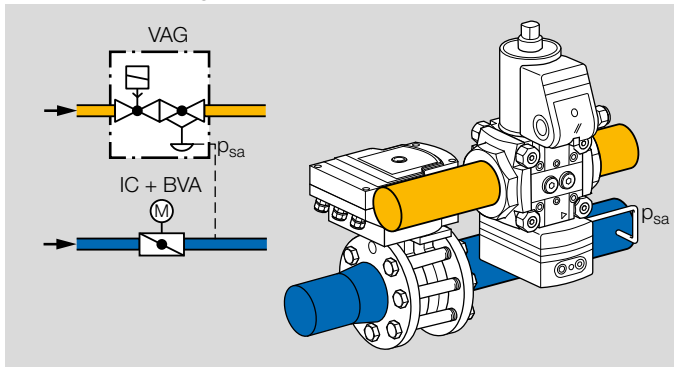

The gas outlet pressure  $p_d$  is controlled via the air/gas ratio control with gas solenoid valve VAG. The gas outlet pressure  $p_d$  follows the changing air control pressure  $p_{sa}$ . The ratio of gas pressure to air pressure remains constant. The VAG is suitable for a turndown up to 10:1.

If a second solenoid valve is used upstream of the VAG, this complies with the requirements of EN 746-2 for two Class A valves connected in series.

### 1.1.6 Modulating control with two gas solenoid valves

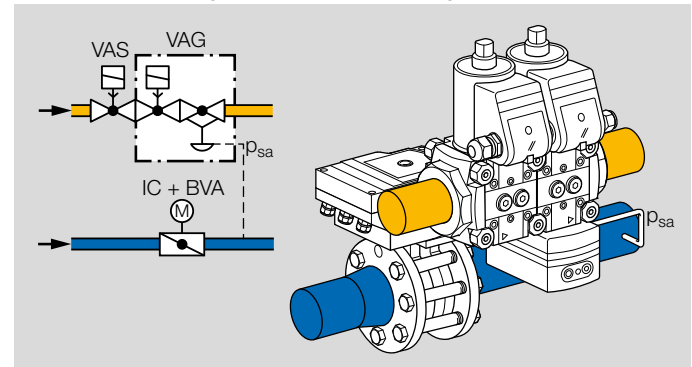


The gas outlet pressure  $p_d$  is controlled via the air/gas ratio control with gas solenoid valve VAG. The gas outlet pressure  $p_d$  follows the changing air control pressure  $p_{sa}$ . The ratio of gas pressure to air pressure remains constant. The VAG is suitable for a turndown up to 10:1.

The gas line is shut off by two Class A valves connected in series, in accordance with the requirements of EN 746-2.




### 1.1.7 Modulating control with two gas solenoid valves and inlet pressure switch

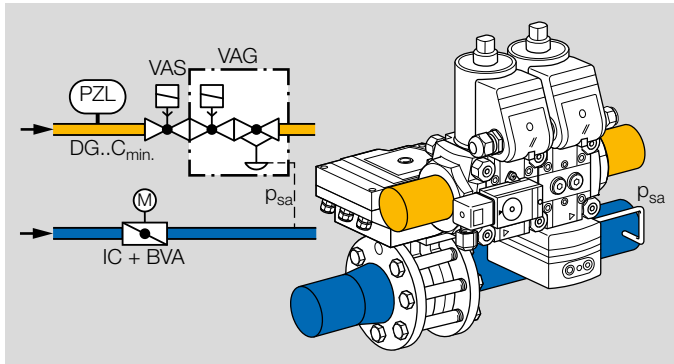

In this case, the minimum inlet pressure  $p_u$  is monitored by the pressure switch DG..C. The simple attachment of the pressure switch module makes installation easier.


### 1.1.8 High/Low control

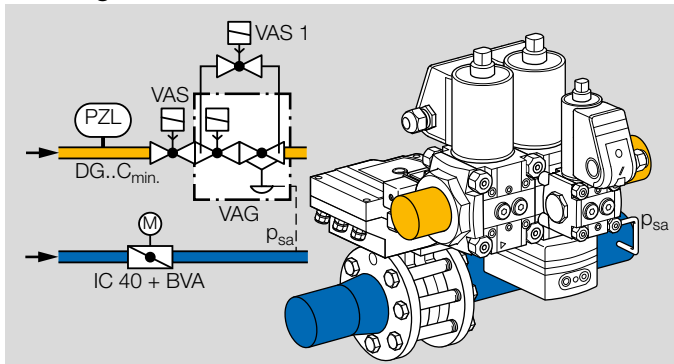

At high fire, the gas outlet pressure  $p_d$  follows the air control pressure  $p_{sa}$ . The ratio of gas pressure to air pressure remains constant. The low-fire rate is determined by the


bypass valve VAS 1. Here as well, the simple attachment of the bypass valve module makes installation easier.

### 1.1.9 Zero pressure control

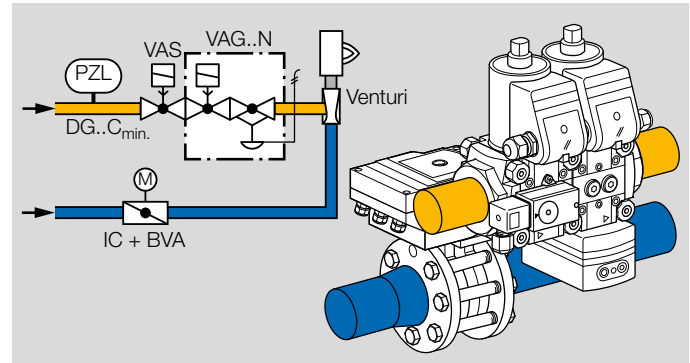

In this application, the control air pressure is the atmospheric air pressure. The air flow rate generates a negative pressure in the gas pipe via the Venturi. This negative pressure is compensated by the air/gas ratio control with gas solenoid valve VAG..N. The greater the negative pressure, the greater the gas flow rate.

### 1.1.10 Staged flow rate control

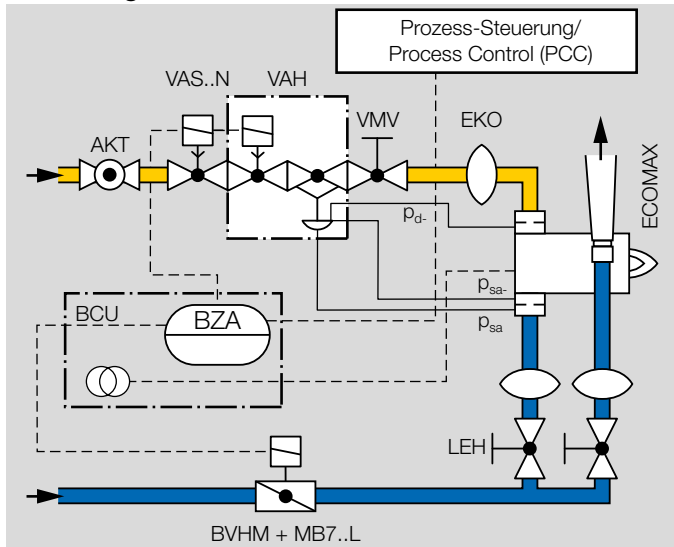


This application shows the VAH on a self-recuperative burner.

The pressure loss in the recuperator depends on the furnace or kiln temperature. When the furnace or kiln temperature is increased (at a constant air supply pressure), the flow rate drops. This change in the air flow rate is measured by the orifice and the VAH changes the gas volume accordingly.

The air index (lambda) can be set using the fine-adjusting valve VMV.

### 1.1.11 Continuous or staged flow rate control

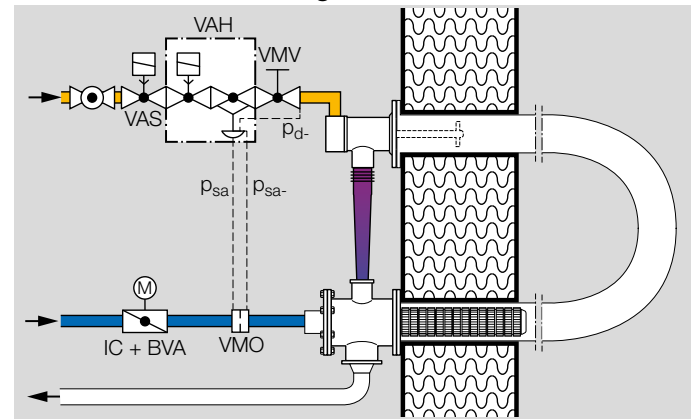


This application shows flow rate control for a tube firing burner system with plug-in recuperator for air preheating.

There are temperature-dependent air pressure losses in the recuperator. The ratio of gas pressure to air pressure does not remain constant. The fluctuating air flow rate is measured at the measuring orifice VMO and the VAH controls the gas flow rate proportionally.


The air index (lambda) can be set using the fine-adjusting valve VMV.

### 1.1.12 Modulating control with variable air/gas ratio control with gas solenoid valve

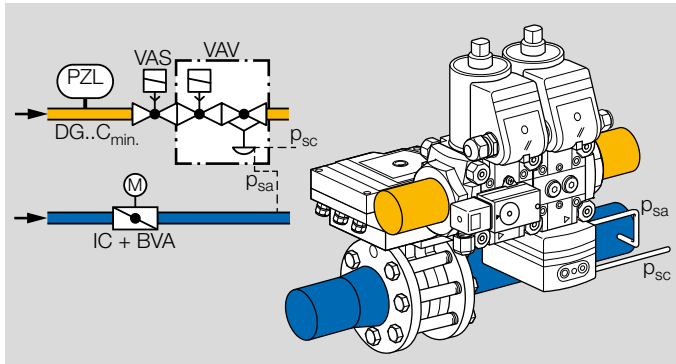

The ratio of gas pressure to air pressure can be adjusted infinitely between 0.6:1 and 3:1. Pressure fluctuations in the combustion chamber can be compensated via the combustion chamber control pressure  $p_{sc}$ , see page 14 (Function).

### 1.1.13 Modulating control in residential heat generation

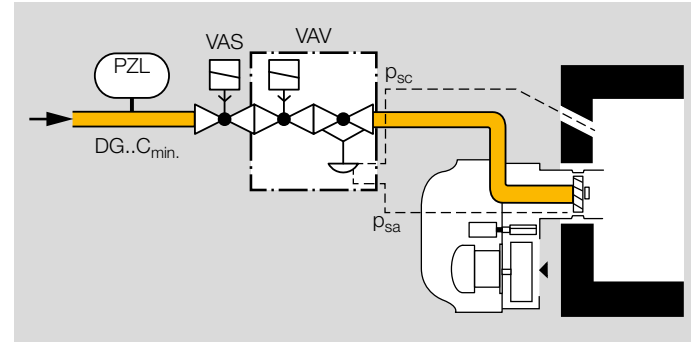

This application shows the variable air/gas ratio control with solenoid valve VAV fitted to a modulating-controlled forced draught burner.

The combustion air volume is set via a butterfly valve for air or by adjusting the fan speed.

## 2 Certification

Certificates – see [www.docuthek.com](http://www.docuthek.com)

### Certified to SIL and PL

VAD, VAG, VAV, VAH



For systems up to SIL 3 pursuant to EN 61508 and PL e pursuant to ISO 13849. See page 50 (Safety-specific characteristic values for SIL and PL).

### EU certified



- 2014/35/EU (LVD), Low Voltage Directive
- 2014/30/EU (EMC), Electromagnetic Compatibility Directive
- 2011/65/EU, RoHS II
- 2015/863/EU, RoHS III
- (EU) 2016/426 (GAR), Gas Appliances Regulation
- EN 161:2011+A3:2013
- EN 88-1:2011+A1:2016
- EN 126:2012
- EN 1854:2010

### FM approved\*

VAD, VAG, VAV, VAH



Factory Mutual Research Class: 7400 Process Control Valves. Designed for applications pursuant to NFPA 85 and NFPA 86. [www.approvalguide.com](http://www.approvalguide.com)

\* Approval does not apply for 100 V AC or 200 V AC.

### ANSI/CSA approved\*

VAD, VAG



American National Standards Institute/Canadian Standards Association – ANSI Z21.21/CSA 6.5, ANSI Z21.18 and CSA 6.3.

[www.csagroup.org](http://www.csagroup.org) – Class number: 3371-83 (natural gas, LPG), 3371-03 (natural gas, propane).

\* Approval does not apply for 100 V AC or 200 V AC.

### UL listed (for 120 V AC only)

VAD, VAG, VAV



Underwriters Laboratories – UL 429 “Electrically operated valves”. [www.ul.com](http://www.ul.com)

### **AGA approved\***

VAD, VAG, VAV



Australian Gas Association, Approval No.: 5,319. [www.agasn.au](http://www.agasn.au)


*\* Approval does not apply for 100 V AC or 200 V AC.*

### **Eurasian Customs Union**



The products VAD, VAG, VAH, VAV, VCD, VCG, VCV, VCH meet the technical specifications of the Eurasian Customs Union.

### 3 Function

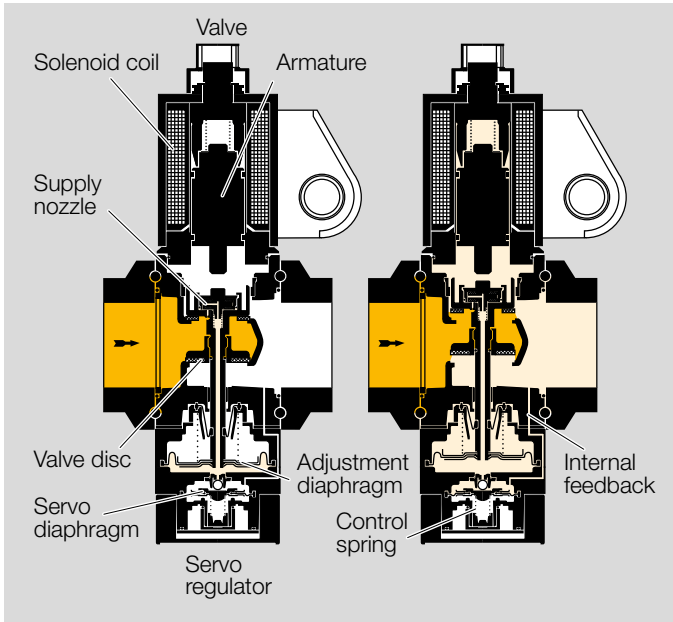


VAD, VAG, VAH, VRH, VAV

The regulator is closed when it is disconnected from the power supply.

Opening: connect the system to the electrical power supply (alternating voltage will be rectified). The blue LED lights up. The coil's magnetic field pulls the armature upwards and clears the supply nozzle for the gas inlet pressure  $p_U$ . The gas passes through the internal impulse tube to the adjustment diaphragm and then pushes the valve plate open. The outlet pressure is applied to the servo-diaphragm via the internal feedback. The servo regulator then maintains a set constant outlet pressure  $p_d$ .


### 3.1 Pressure regulator for gas VAD

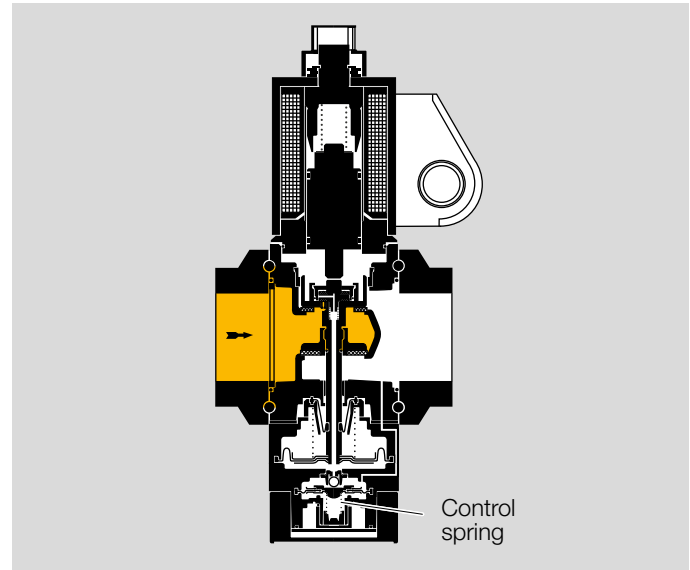

VAD

The nominal outlet pressure  $p_d$  is defined by the control spring.

### 3.2 Air/gas ratio control VAG

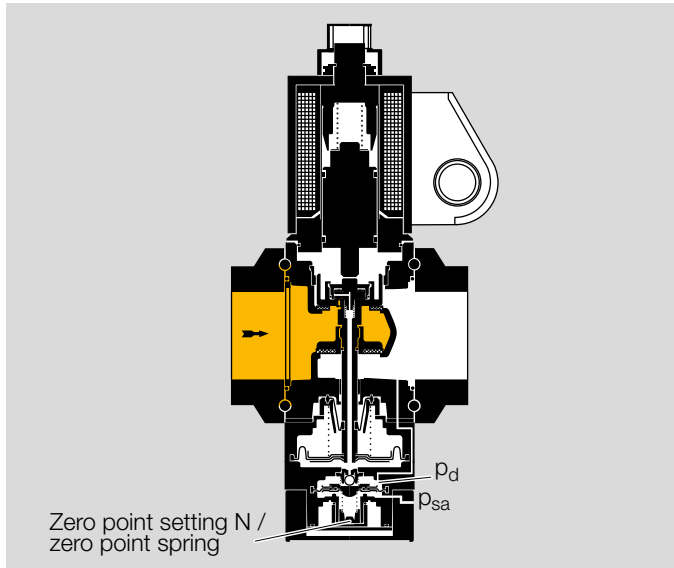


VAG

The air/gas ratio control VAG controls the outlet pressure  $p_d$  depending on the variable air control pressure  $p_{sa}$ .

The ratio of gas pressure to air pressure remains constant: 1:1. The VAG is suitable for a turndown up to 10:1.

If the burner operates at low-fire rate, the gas/air mixture can be changed by adjusting the zero point spring "N".

### 3.3 Flow rate regulators VAH, VRH

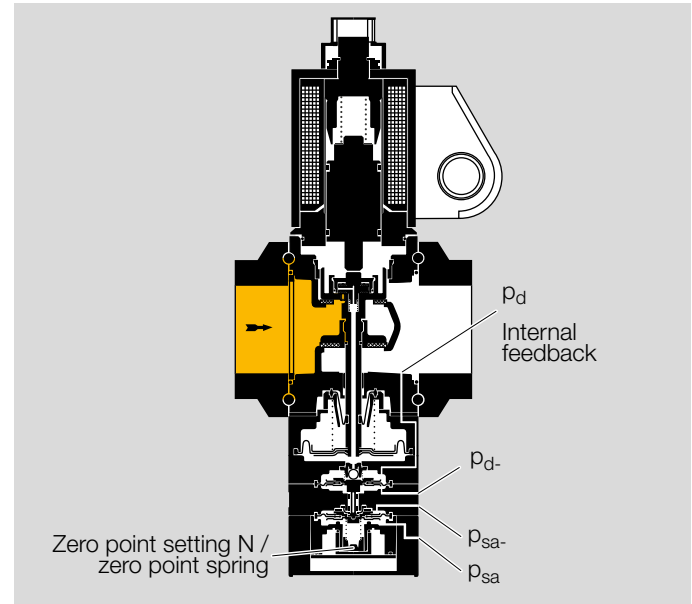


VAH (VRH: no valve)

The flow rate regulators VAH, VRH control the gas flow rate depending on the variable air flow rate. The ratio of gas flow rate to air flow rate remains constant. If the burner operates at low-fire rate, the gas/air mixture can be changed by adjusting the zero point spring "N".

In addition, flow rate regulator VAH is designed as a gas solenoid valve and shuts off the gas or air supply safely.

### 3.4 Variable air/gas ratio control VAV

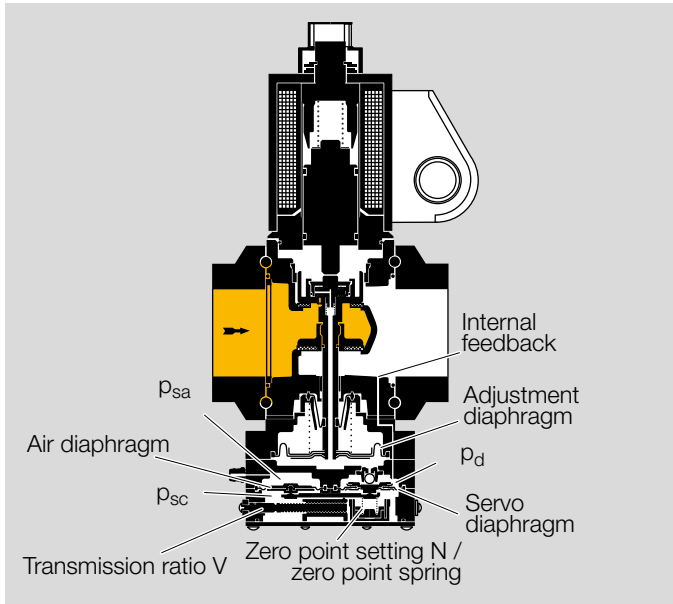

#### VAV

The servo regulator maintains a set constant outlet pressure  $p_d$ . The variable air/gas ratio control VAV controls the outlet pressure  $p_d$  depending on the variable air control pressure  $p_{sa}$ . The ratio of gas pressure to air pressure remains constant.

The settings N and V can be changed and read off from both sides of the unit using the adjusting screws.

The ratio of gas pressure to air pressure at low-fire rate can be changed by adjusting the zero point setting N. By turning the adjusting screw "N", the force of the zero point

spring and thus the zero point is changed by  $\pm 1.5$  mbar (0.6 "WC), see page 32 (Project planning information).

The high-fire rate is set by turning the adjusting screw "V" until the required flue gas values are achieved, see page 32 (Project planning information). The ratio of gas pressure to air pressure can be set from 0.6:1 to 3:1.


The settings N and V can influence each other and must be repeated if necessary.

The outlet pressure  $p_d$  is applied to the servo diaphragm via the internal feedback. The combustion chamber control pressure  $p_{sc}$  is transmitted to the space under the air and servo diaphragms via an impulse line.

The pressure differential  $p_{sa} - p_{sc}$  is achieved on the air diaphragm and the pressure differential  $p_d - p_{sc}$  on the servo diaphragm. This ensures that pressure fluctuations in the combustion chamber can be compensated. The flue gas values remain constant in the case of fluctuations in the combustion chamber pressure  $(p_d - p_{sc}) = (p_{sa} - p_{sc}) \times V + N$ .



### 3.5 Pressure regulator with gas solenoid valve VAx..S and closed position indicator

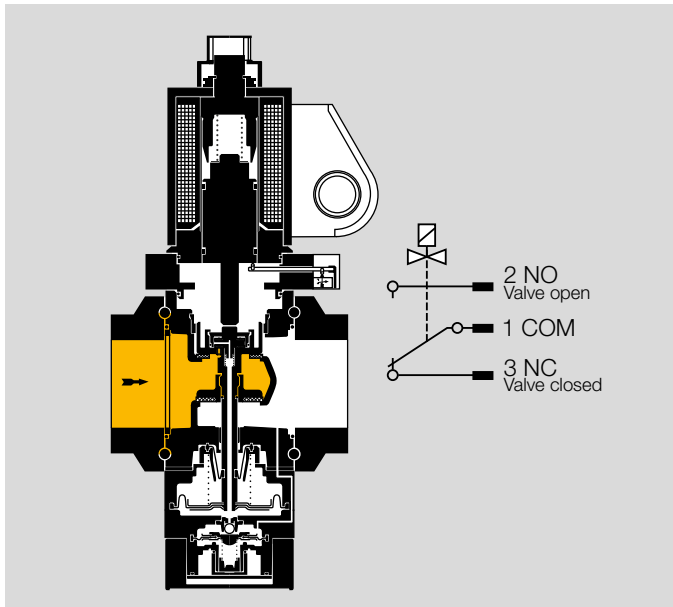

VAx..S

**Opening:** when the pressure regulator is opened, the closed position indicator switches. The visual position indicator is activated. The “open” signal is marked in red. The double valve seat opens to release the volume of gas.

**Closing:** the pressure regulator VAx is disconnected from the voltage supply and the closing spring presses the double valve plate on to the valve seat. The closed position indicator switches. The visual position indicator is white for “closed”.

The actuator cannot be rotated on a pressure regulator with a closed position indicator.

NOTE: NFPA 86 – The safety shut-off valve VAS..S must be fitted with an overtravel switch with a visual position indicator, and the burner-side pressure regulator with gas solenoid valve VAx..S must be fitted with a closed position indicator. One gas solenoid valve must be verifiably closed. The closed position can be verified using the proof of closure switch of the gas solenoid valve VAS..S.


### 3.6 Connection diagram

Wiring to EN 60204-1.


Connection diagram for VAx..S with closed position indicator, see page 17 (Pressure regulator with gas solenoid valve VAx..S and closed position indicator).

Further connection options, see Operating instructions VAD, VAG, VAV, VAH... at [www.docuthek.com](http://www.docuthek.com).


#### VAx with M20 cable gland

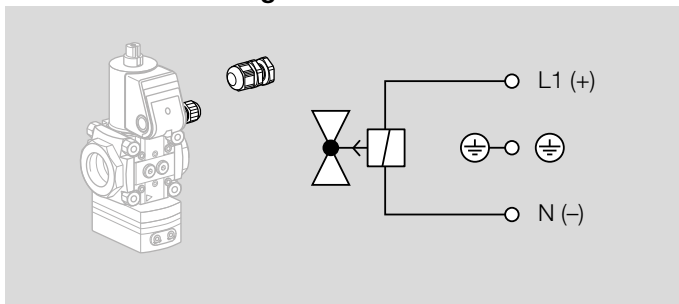


#### VAx with plug

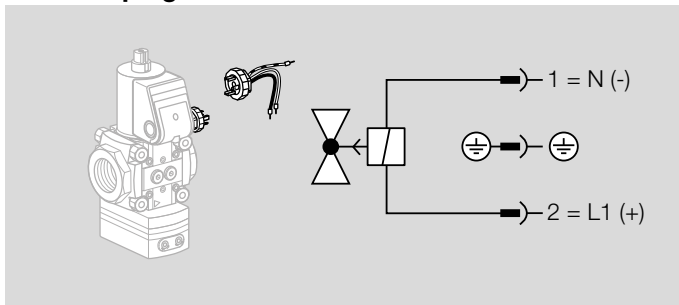

#### VAS with VAD/VAG/VAH/VAV with M20 cable gland

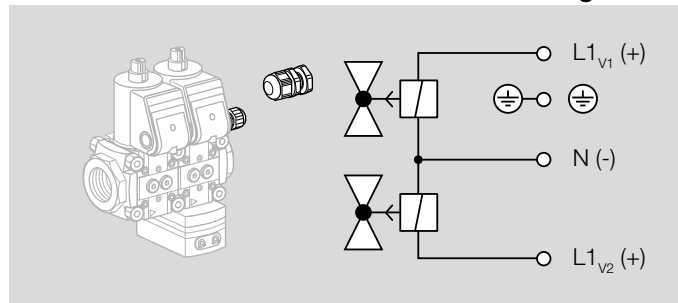

#### VAS with VAD/VAG/VAH/VAV with plug

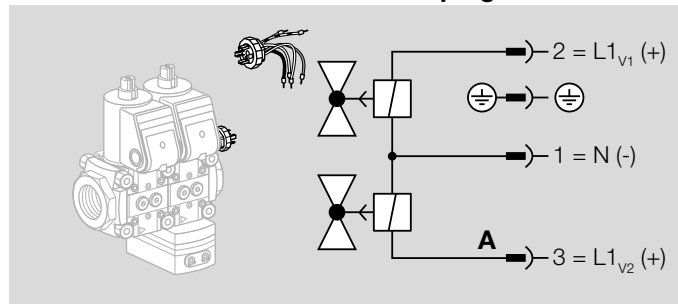


## **4 Flow rate**

### **4.1 Calculating the nominal size**

A web app for calculating the nominal size is available at [www.adlatus.org](http://www.adlatus.org).

## 4.2 VAD

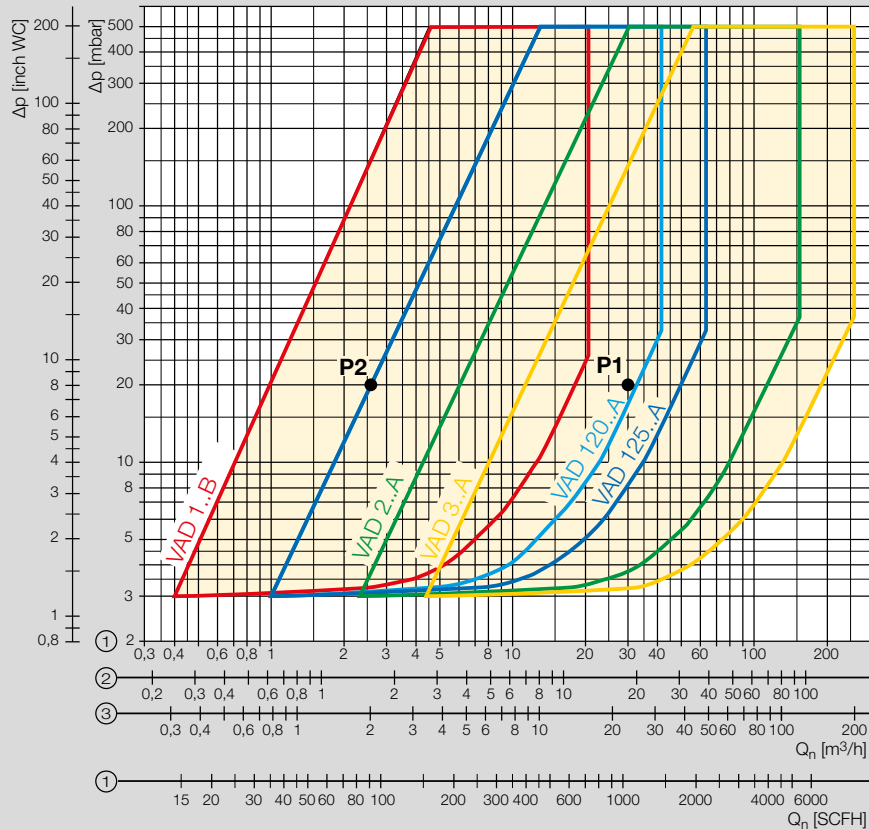

- 1 = natural gas ( $\rho = 0.80 \text{ kg/m}^3$ )
- 2 = propane ( $\rho = 2.01 \text{ kg/m}^3$ )
- 3 = air ( $\rho = 1.29 \text{ kg/m}^3$ )

The characteristic flow rate curves have been measured with the specified flanges and a fitted strainer. If two or more valves are combined, the pressure loss of each additional valve drops by approx. 5%.

### **Selection example for VAD**

Gas type: natural gas

Inlet pressure  $p_u = 80$  mbar

Outlet pressure  $p_d = 60$  mbar

Desired control ratio from high-fire to low-fire rate  $R_V = 10:1$


High-fire rate:  $\Delta p = p_u - p_d = 20$  mbar -> point P1

Low-fire rate: -> point P2:  $Q_{min.} = 2.6$  m<sup>3</sup>/h for  $\Delta p = 20$  mbar

$R_V = Q_{max.} / Q_{min.} = 11.5:1$

Point P1 and point P2 must be within the working range of a unit size. We recommend that you select the smallest size to achieve the best control properties.

## 4.3 VAG, VAH, VRH, VAV

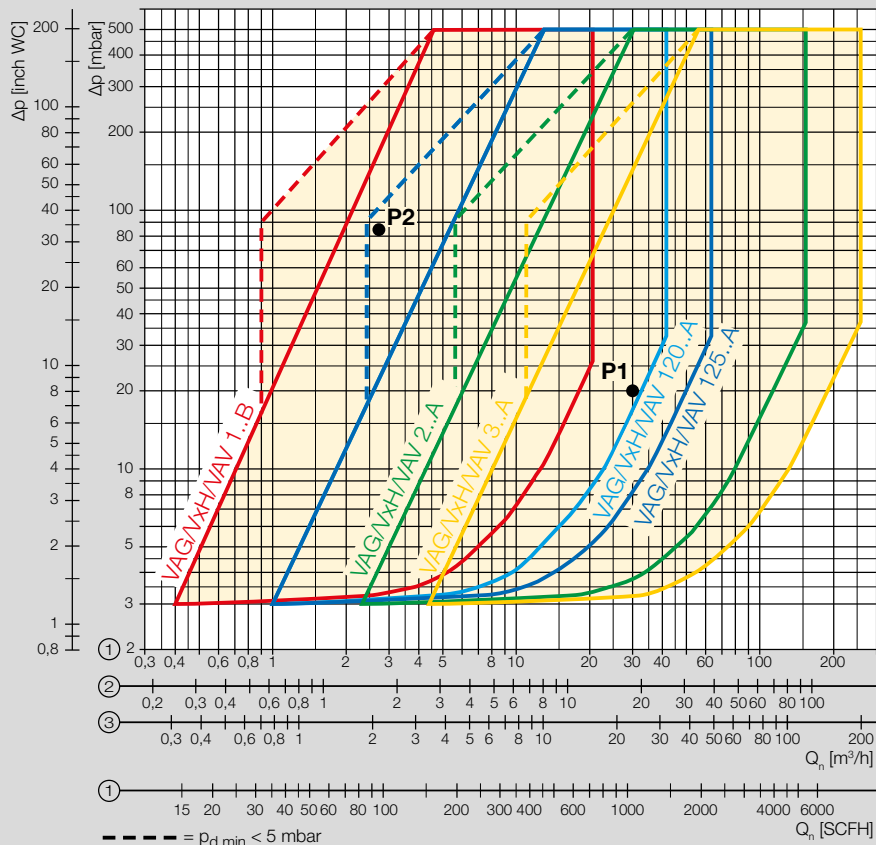

1 = natural gas ( $\rho = 0.80 \text{ kg/m}^3$ )

2 = propane ( $\rho = 2.01 \text{ kg/m}^3$ )

3 = air ( $\rho = 1.29 \text{ kg/m}^3$ )

The characteristic flow rate curves have been measured with the specified flanges and a fitted strainer. If two or more valves are combined, the pressure loss of each additional valve drops by approx. 5%.

### **Selection example for VAG, VAH, VRH, VAV**

Gas type: natural gas

Flow rate  $Q_{\max.} = 30 \text{ m}^3/\text{h}$

Inlet pressure  $p_u = 80 \text{ mbar}$

Outlet pressure  $p_{d \max.}$  VAG = 60 mbar

Desired control ratio from high-fire to low-fire rate  $R_V = 10:1$

High-fire rate:  $\Delta p = p_u - p_d = 20 \text{ mbar} \rightarrow$  point P1

Low-fire rate:  $p_{d \min.} = p_{d \max.} / R_{V2} = 0.6 \text{ mbar}$


$Q_{\min.} = Q_{\max.} / R_V = 3 \text{ m}^3/\text{h}$

$\Delta p = p_u - p_{d \min.} = 79.4 \text{ mbar}$

$\rightarrow$  point P2, selected: VAG 120..A

Point P1 and point P2 must be within the working range of a unit size. We recommend that you select the smallest size to achieve the best control properties.

## 4.4 Zero governor VAG..N

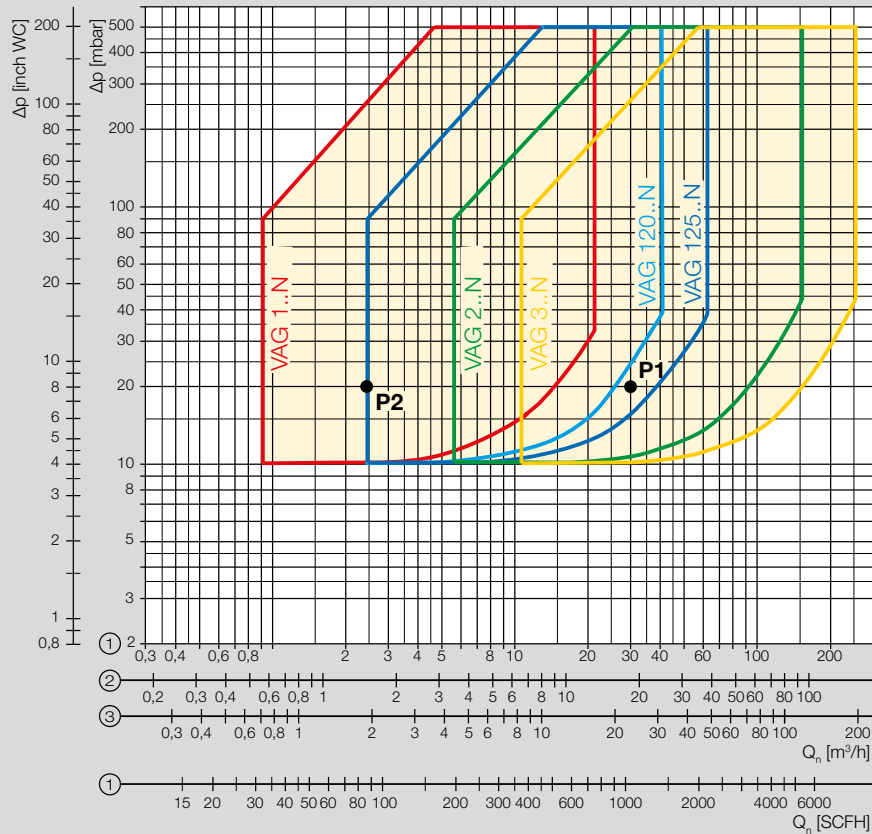

- 1 = natural gas ( $\rho = 0.80 \text{ kg/m}^3$ )
- 2 = propane ( $\rho = 2.01 \text{ kg/m}^3$ )
- 3 = air ( $\rho = 1.29 \text{ kg/m}^3$ )

The characteristic flow rate curves have been measured with the specified flanges and a fitted strainer. If two or more valves are combined, the pressure loss of each additional valve drops by approx. 5%.



### Selection example for VAG..N

Gas type: natural gas

Flow rate  $Q_{\max.} = 30 \text{ m}^3/\text{h}$

Inlet pressure  $p_u = 20 \text{ mbar}$

Outlet pressure  $p_{d \max.} = 0 \text{ mbar}$  (atmospheric pressure)

Desired control ratio from high-fire to low-fire rate  $R_V = 10:1$

High-fire rate:  $\Delta p = p_u - p_d = 20 \text{ mbar}$  -> point P1

Low-fire rate: -> point P2:  $Q_{\min.} = 2.4 \text{ m}^3/\text{h}$  for  $\Delta p = 20 \text{ mbar}$

$R_V = Q_{\max.} / Q_{\min.} = 12.3:1$

Point P1 and point P2 must be within the working range of a unit size. We recommend that you select the smallest size to achieve the best control properties.

### 4.4.1 Calculating the nominal size

A web app for calculating the nominal size is available at [www.adlatus.org](http://www.adlatus.org).

## **5 Selection**

### **5.1 ProFi**

A web app selecting the correct product is available at [www.adlatus.org](http://www.adlatus.org).

## 5.2 VAD selection table


Option	VAD 115	VAD 120, VAD 125	VAD 240	VAD 350
DN – inlet	15, 20, 25	15, 20, 25	25, 32, 40, 50	40, 50, 65
DN – outlet	15, 20, 25	15, 20, 25	40	50
Pipe connection	R, N	R, N	R, N, F	R, N, F
Opening properties	/N	/N	/N	/N
Mains voltage	W, Y, Q, P, K	W, Y, Q, P, K	W, Y, Q, P, K	W, Y, Q, P, K
Feedback <sup>1)</sup>	S, G	S, G	S, G	S, G
Viewing side	R, L	R, L	R, L	R, L
Electrical connection	M20, plug, plug with socket	M20, plug, plug with socket	M20, plug, plug with socket	M20, plug, plug with socket
Outlet pressure $p_d$	-25, -50, -100	-25, -50, -100	-25, -50, -100	-25, -50, -100
Valve seat	B	A	A	A
Accessories, right	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VBY <sup>1)</sup> , VAS 1	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VBY <sup>1)</sup> , VAS 1	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VAS 1 <sup>1)</sup>	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VAS 1 <sup>1)</sup>
Accessories, left	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VBY <sup>1)</sup> , VAS 1	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VBY <sup>1)</sup> , VAS 1	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VAS 1 <sup>1)</sup>	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VAS 1 <sup>1)</sup>

<sup>1)</sup> Closed position indicator and bypass/pilot gas valve cannot be fitted together on the same side.

<sup>2)</sup> Specify the test point for inlet pressure  $p_u$  or outlet pressure  $p_d$ .

### Order example

VAD 240R/NW-100A

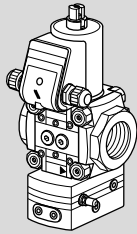

## 5.3 VAG, VAH, VAV selection table


Option	VAG/VAH/VAV 115	VAG/VAH/VAV 120, VAD/VAH/VAV 125	VAG/VAH/VAV 240	VAG/VAH/VAV 350
DN – inlet	–, 15, 20, 25	–, 15, 20, 25	–, 25, 32, 40, 50	–, 40, 50, 65
DN – outlet	15, 20, 25	15, 20, 25	40	50
Pipe connection	R, N	R, N	R, N, F	R, N, F
Opening properties	/N	/N	/N	/N
Mains voltage	W, Y, Q, P, K	W, Y, Q, P, K	W, Y, Q, P, K	W, Y, Q, P, K
Feedback <sup>1)</sup>	S, G	S, G	S, G	S, G
Viewing side	R, L	R, L	R, L	R, L
Electrical connection	M20, plug, plug with socket	M20, plug, plug with socket	M20, plug, plug with socket	M20, plug, plug with socket
Valve seat	B	A	A	A
Connection kit for VAG	E, K, A, N	E, K, A, N	E, K, A, N	E, K, A, N
Connection kit for VAH	E, A	E, A	E, A	E, A
Connection kit for VAV	E, K, A	E, K, A	E, K, A	E, K, A
Accessories, right	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VBY <sup>1)</sup> , VAS 1	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VBY <sup>1)</sup> , VAS 1	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VAS 1 <sup>1)</sup>	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VAS 1 <sup>1)</sup>
Accessories, left	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VBY <sup>1)</sup> , VAS 1	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VBY <sup>1)</sup> , VAS 1	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VAS 1 <sup>1)</sup>	Screw plug, test nipple, DG 17–300 <sup>2)</sup> , VAS 1 <sup>1)</sup>

<sup>1)</sup> Closed position indicator and bypass/pilot gas valve cannot be fitted together on the same side.

<sup>2)</sup> Specify the test point for inlet pressure  $p_U$  or outlet pressure  $p_d$ .

## Order example

VAG 240R/NWAE

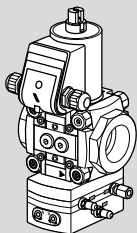


## 5.4 VRH selection table

Option	VRH 115	VRH 120, VRH 125	VRH 240	VRH 350
DN – inlet	-, 15, 20, 25	-, 15, 20, 25	-, 25, 32, 40, 50	-, 40, 50, 65
DN – outlet	15, 20, 25	15, 20, 25	40	50
Pipe connection	R, N	R, N	R, N, F	R, N, F
Inlet pressure $p_u$	05	05	05	05
Valve seat	B	A	A	A
Connection kit	E, A	E, A	E, A	E, A
Accessories, right	Screw plug, test nipple	Screw plug, test nipple	Screw plug, test nipple	Screw plug, test nipple
Accessories, left	Screw plug, test nipple	Screw plug, test nipple	Screw plug, test nipple	Screw plug, test nipple

### Order example

VRH 240R05AE/PP/PP

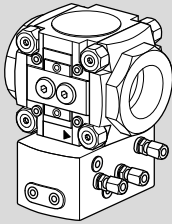


## 5.5 Type code

<b>VAD</b>	Pressure regulator with solenoid valve
<b>VAG</b>	Air/gas ratio control with solenoid valve
<b>VAH</b>	Flow rate regulator with solenoid valve
<b>VAV</b>	Variable air/gas ratio control with solenoid valve
<b>VRH</b>	Flow rate regulator
<b>1-3</b>	Sizes
<b>15-50</b>	Inlet and outlet flange nominal size
<b>R</b>	Rp internal thread
<b>F</b>	Flange to ISO 7005
<b>/N</b>	Quick opening, quick closing
<b>W</b>	Mains voltage 230 V AC, 50/60 Hz
<b>Y</b>	Mains voltage 200 V AC, 50/60 Hz
<b>Q</b>	Mains voltage 120 V AC, 50/60 Hz
<b>P</b>	Mains voltage 100 V AC, 50/60 Hz
<b>K</b>	Mains voltage 24 V DC
<b>SR</b>	Closed position switch with visual position indicator, right
<b>SL</b>	Closed position switch with visual position indicator, left
<b>GR</b>	Closed position switch for 24 V and visual position indicator, right
<b>GL</b>	Closed position switch for 24 V and visual position indicator, left
<b>-25</b>	Outlet pressure $p_d$ for VAD: 2.5–25 mbar
<b>-50</b>	Outlet pressure $p_d$ for VAD: 20–50 mbar
<b>-100</b>	Outlet pressure $p_d$ for VAD: 35–100 mbar
<b>A</b>	Standard valve seat
<b>B</b>	Reduced valve seat

<b>E</b>	VAG, VAV, VAH, VRH: connection for air control pressure: compression fitting
<b>K</b>	VAG, VAV: connection for air control pressure: plastic hose coupling
<b>A</b>	VAG, VAV, VAH, VRH: connection for air control pressure: 1/8" NPT adapter
<b>N</b>	VAG: zero governor VRH: no solenoid valve

## 5.6 Accessory selection

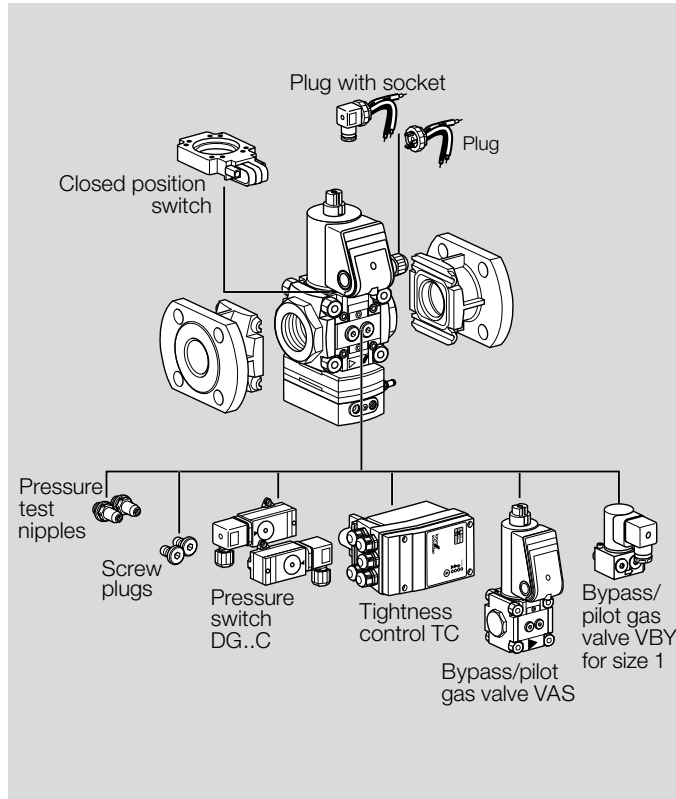

Modularly configurable with:

- Screw plugs
- Pressure test nipples
- Pressure switch DG..C for inlet and/or outlet pressure
- Tightness control TC
- Bypass/pilot gas valve VBY 8 for size 1
- Bypass/pilot gas valve VAS 1
- Attachment block for the connection of a pressure gauge, for example


For further information, see page 36 (Accessories).

## 6 Project planning information

### 6.1 Test points


For further information on outlet pressure, air control pressure and combustion chamber control pressure, see page 44 (Technical data).

The inlet pressure  $p_u$  and the outlet pressure  $p_d$  can be measured on both sides of the valve body.

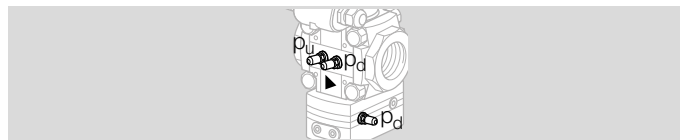


To increase the control accuracy, an external impulse line can be connected, instead of pressure test point  $p_d$ .

#### VAD

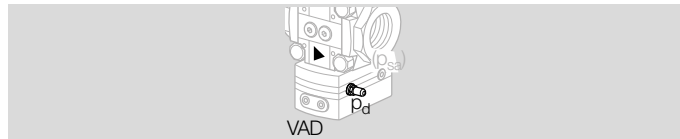


Test point for the gas outlet pressure  $p_d$  on the regulator body. A combustion chamber control line ( $p_{sc}$ ) can be connected to connection  $p_{sa}$  for maintaining a constant burner capacity.

#### VAG

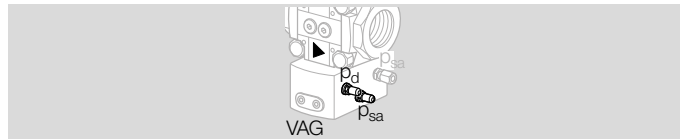


Additional test point for the air control pressure  $p_{sa}$  on the regulator body. For burners which are operated with excess air, the values for  $p_d$  and  $p_{sa}$  may be below the limit. No situation which would jeopardize safety must arise. Avoid CO formation.

#### VAV

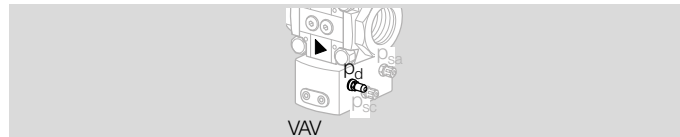

Test point for the outlet pressure  $p_d$  on the regulator body.


#### VAH

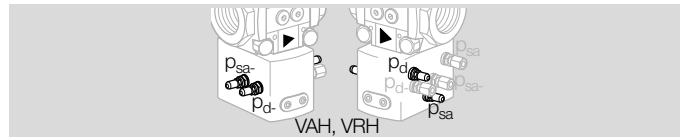

Additional test points for the outlet pressure  $p_d$  and the air control pressure  $p_{sa}/p_{sa-}$  on the regulator body. A gas/air mixture may be applied at the  $p_{sa-}$  connection for the air control pressure.



## 6.2 Installation

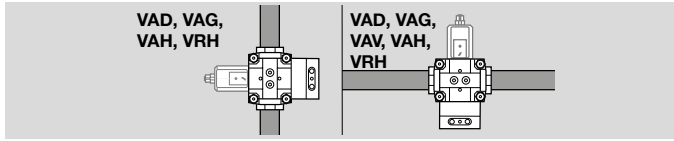


Sealing material and thread cuttings must not be allowed to get into the valve housing. Install a filter upstream of every system.

Always install an activated carbon filter upstream of the regulator when air is the medium. Otherwise, the ageing of elastomer materials will be accelerated.

The pipe system must be designed in such a way so as to avoid strain at the connections.


Do not store or install the unit in the open air.

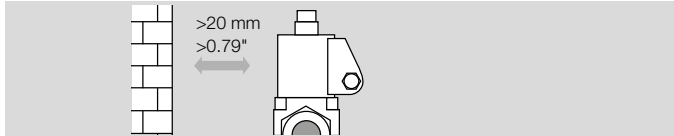


The device must not be in contact with masonry. Minimum clearance 20 mm (0.79 inch).



Ensure that there is sufficient space for installation, adjustment and maintenance work. Minimum clearance of 25 cm (9.8 inch) above the black solenoid actuator.

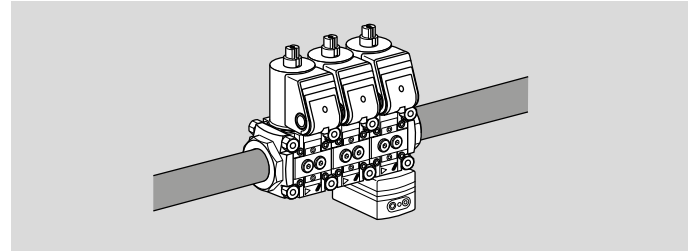

If more than three valVario controls are installed in line, the controls must be supported.

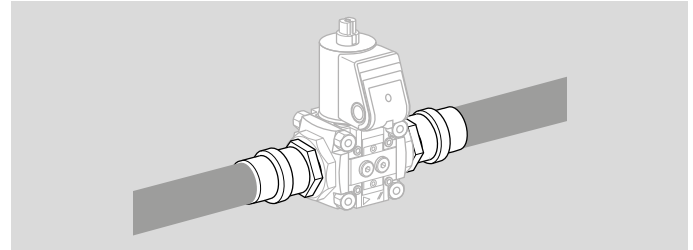


The seals in some gas compression fittings are approved for temperatures of up to 70°C (158°F). This temperature limit will not be exceeded if the flow through the pipe is at least 1 m<sup>3</sup>/h (35.31 SCFH) of gas and the maximum ambient temperature is 50°C (122°F).

In the case of a VCx combination, it is recommended to always install the bypass/pilot gas valve on the rear of the second valve and the tightness control on the viewing side of the first valve, together with the connection box.

### 6.2.1 Installation position

VAD, VAG, VAH: black solenoid actuator in the vertical upright position or tilted up to the horizontal, not upside down.  
 VRH: in the vertical upright position or tilted up to the horizontal, not upside down.

VAV: Installation in the vertical position only, black solenoid actuator in the vertical upright position.

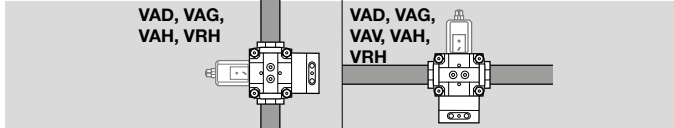


For VAG/VAH/VRH in the horizontal position with modulating control: min. inlet pressure  $p_{u \text{ min.}} = 80 \text{ mbar}$  (32 "WC).

To ensure that the air/gas ratio control VAG, the flow rate regulator VAH, VRH or the variable air/gas ratio control VAV can react quickly when the load is changed, the impulse line for the air control pressure  $p_{sa}$  and for VAV, the impulse line for the combustion chamber control pressure  $p_{sc}$  should be kept as short as possible. The tube internal diameter for the impulse line must always be  $\geq 3.9 \text{ mm}$  (0.15").

### VAH, VRH

It is not permitted to install a gas solenoid valve VAS downstream of flow rate regulator VAH, VRH and upstream of fine-adjusting valve VMV. The VAS would no longer be able to perform its function as a second safety valve if installed in the above-mentioned position.

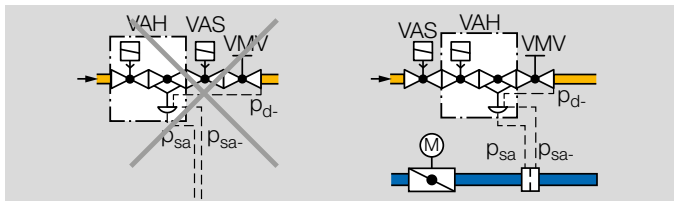


The measuring orifice in the air line for impulse lines  $p_{sa}$  and  $p_{sc}$  must always be installed downstream of the air control valve.

### VAV

The impulse line for the combustion chamber control pressure  $p_{sc}$  must be fitted so that no condensation can enter the pressure regulator, but rather flows back into the combustion chamber.

### 6.3 Setting the low-fire rate on VAG, VAH, VRH, VAV

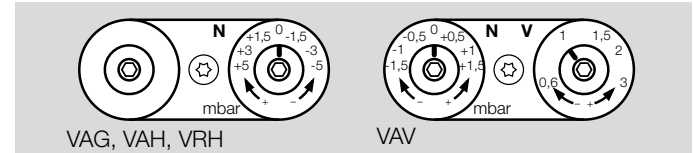


If the burner operates at low-fire rate, the gas/air mixture can be changed using the parallel shift of the characteristic curve by turning the adjusting screw "N".

Adjusting range at low fire:

VAG, VAH, VRH: -5 to +5 mbar (-1.95 to +1.95 "WC).

VAV: -1.5 to +1.5 mbar (-0.6 to +0.6 "WC).

## 6.4 Setting the high-fire rate on VAV

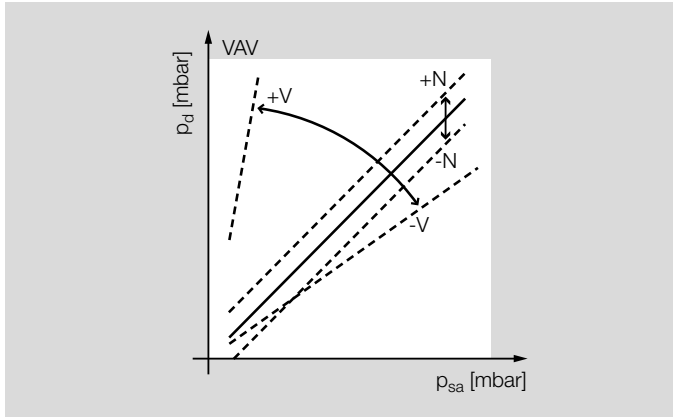

To set the high-fire rate, the transmission ratio is changed using the adjusting screw “V” until the required flue gas values are achieved.

Transmission ratio:

$$V = p_d : p_{sa} = 0,6:1 \text{ to } 3:1.$$

The settings N and V can influence each other and must be repeated if necessary.

### Calculation

With connection to the combustion chamber control pressure  $p_{sc}$ :


$$(p_d - p_{sc}) = V \times (p_{sa} - p_{sc}) + N$$

If the combustion chamber control pressure  $p_{sc}$  is not connected:

$$p_d = V \times p_{sa} + N$$

## 6.5 Electrical connection

Use temperature-resistant cable ( $> 90^\circ\text{C}$ ) for the electrical connection.

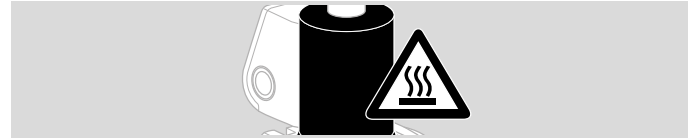


The solenoid actuator heats up during operation. Surface temperature approx.  $85^\circ\text{C}$  ( $185^\circ\text{F}$ ) pursuant to EN 60730-1. In the case of double solenoid valves, the position of the connection box can only be changed by removing the actuator and reinstalling it rotated by  $90^\circ$  or  $180^\circ$ . The solenoid actuator cannot be rotated on solenoid valves with proof of closure switch VCx..S or VCx..G.

## 7 Accessories

### 7.1 Pressure switch for gas DG..C


Monitoring the inlet pressure  $p_u$ : the electrical plug of the pressure switch for gas points towards the inlet flange.  
Monitoring the outlet pressure  $p_d$ : the electrical plug of the pressure switch for gas points towards the outlet flange.

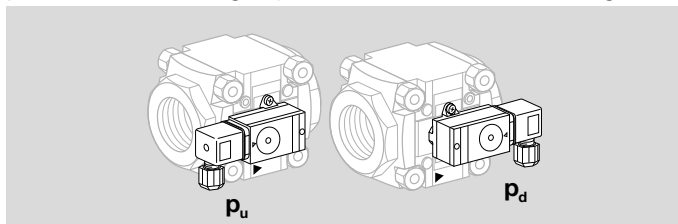

Scope of delivery:  
1 x pressure switch for gas,  
2 x retaining screws,  
2 x sealing rings.

Also available with gold-plated contacts for voltages of 5 to 250 V.

#### DG..VC

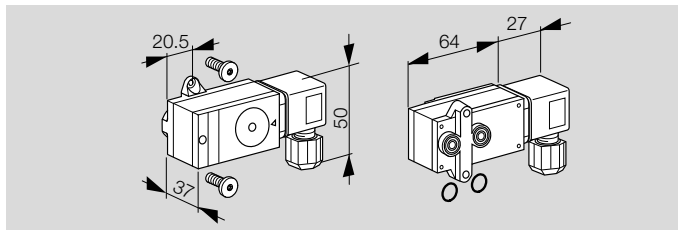


Type	Adjusting range [mbar]
DG 17VC	2 to 17
DG 40VC	5 to 40

Type	Adjusting range [mbar]
DG 110VC	30 to 110
DG 300VC	100 to 300

#### DG..VCT

With AWG 18 connection conductors

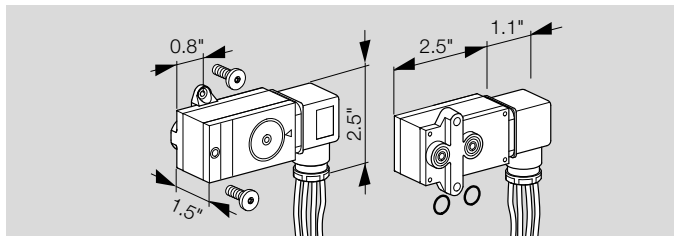


Type	Adjusting range [°WC]
DG 17VCT	0.8 to 6.8
DG 40VCT	2 to 16
DG 110VCT	12 to 44
DG 300VCT	40 to 120

### 7.2 DG..C fastening set for VAX 1–3


Order No.: 74922376,  
scope of delivery:  
2 x retaining screws,  
2 x sealing rings.

## 7.3 Bypass/pilot gas valve VAS 1

### 7.3.1 Flow rate, VAS 1 attached to VAx 1, VAx 2, VAx 3

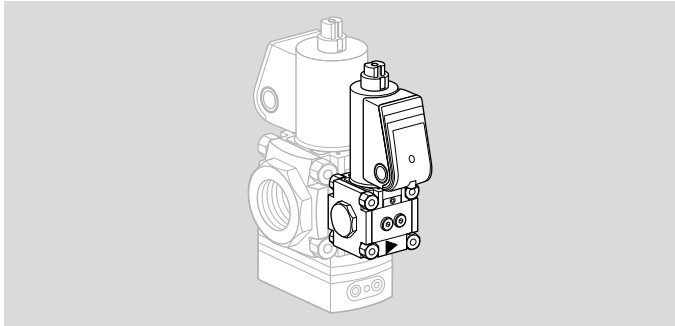

The characteristic flow rate curves have been measured for bypass valve VAS 1 with connection pipe diameter 1 to 10 mm (0.04–0.4") and for the pilot gas valve with 10 mm connection pipe.

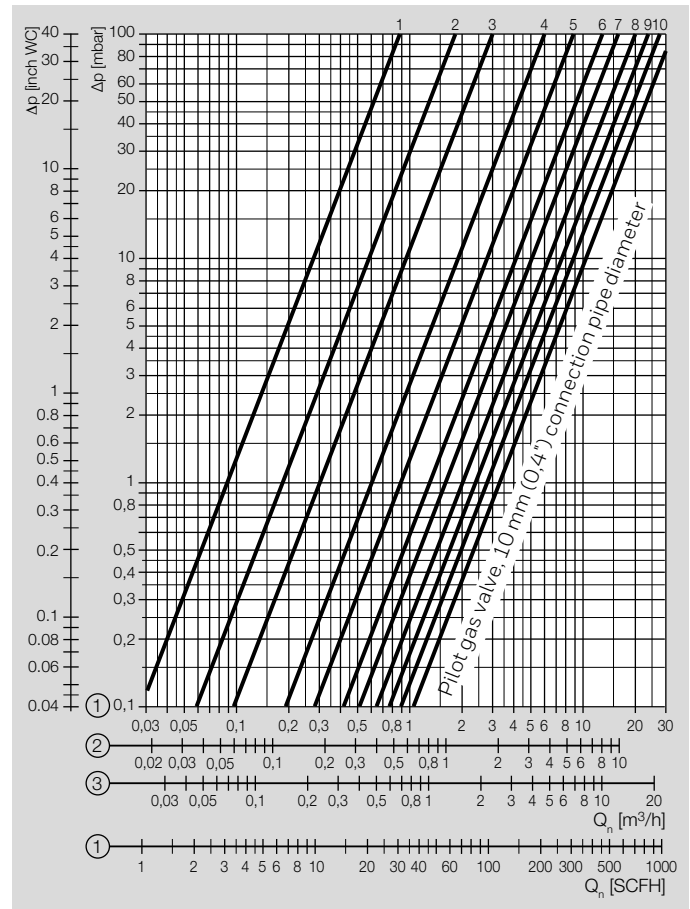


1 = natural gas ( $\rho = 0.80 \text{ kg/m}^3$ )

2 = propane ( $\rho = 2.01 \text{ kg/m}^3$ )

3 = air ( $\rho = 1.29 \text{ kg/m}^3$ )

### 7.3.2 Scope of delivery of VAS 1 for VAx 1, VAx 2, VAx 3

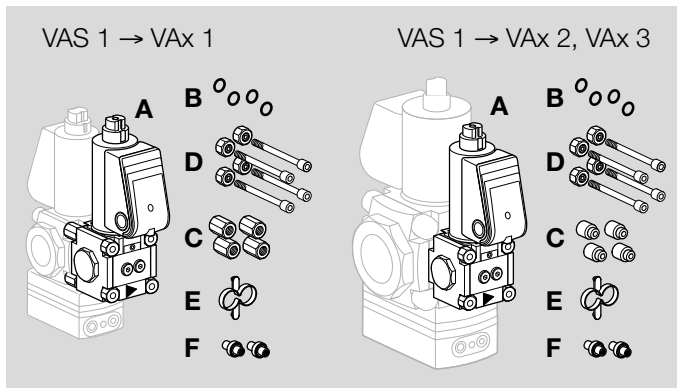

- A** 1 x bypass/pilot gas valve VAS 1,
- B** 4 x O-rings,
- C** 4 x double nuts for VAS 1 -> VAx 1,
- C** 4 x spacer sleeves for VAS 1 -> VAx 2/VAx 3,
- D** 4 x connection parts,
- E** 1 x mounting aid.

Pilot gas valve VAS 1:

- F** 1 x connection pipe, 1 x sealing plug, if the pilot gas valve has a threaded flange on the outlet side.

Bypass valve VAS 1:

- F** 2 x connection pipes, if the bypass valve has a blind flange on the outlet side.


Standard: Ø 10 mm.

Other connection pipes ( **F** ) with bypass diameter as of 1 mm are available.

Ø	Order No.
1 mm	74923877
2 mm	74923910
3 mm	74923911
4 mm	74923912
5 mm	74923913
6 mm	74923914
7 mm	74923915
8 mm	74923916
9 mm	74923917
10 mm	74923918

## 7.4 Bypass/pilot gas valve VB8

### 7.4.1 Flow rate, VB8

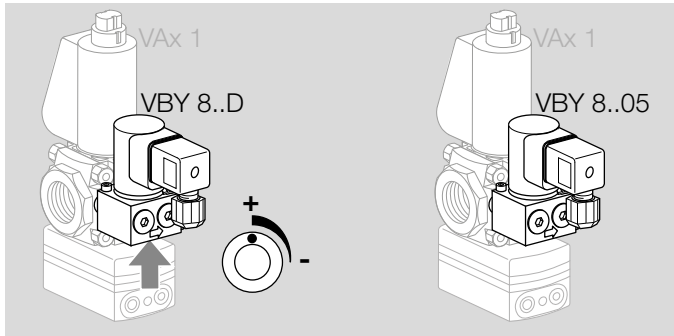


#### VB8..D

The flow rate can be set by turning the flow rate restrictor (4 mm/0.16" hexagon socket) ¼ of a turn. Flow rate: 10 to 100%.

#### VB8..05

The flow is routed through a 0.5 mm (0.02") nozzle and thus has a fixed characteristic flow rate curve. Adjustment is not possible.

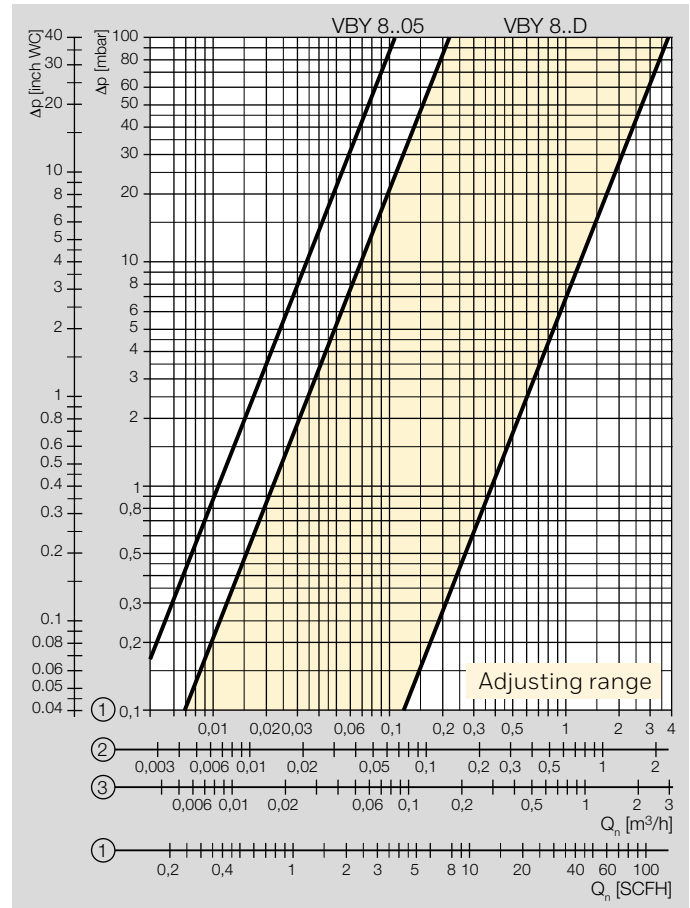

1 = natural gas ( $\rho = 0.80 \text{ kg/m}^3$ )

2 = propane ( $\rho = 2.01 \text{ kg/m}^3$ )

3 = air ( $\rho = 1.29 \text{ kg/m}^3$ )

### 7.4.2 Technical data VBY 8

Inlet pressure  $p_{u \max}$ : 500 mbar (7 psig).

Ambient temperature:

0 to +60 °C (32 to 140 °F), no condensation permitted.

Storage temperature:

0 to +40 °C (32 to 104 °F).

Power consumption:


24 V DC = 8 W,

120 V AC = 8 W,

230 V AC = 9,5 W.

Enclosure: IP 54.

### 7.4.3 Scope of delivery of VBY for VAx 1

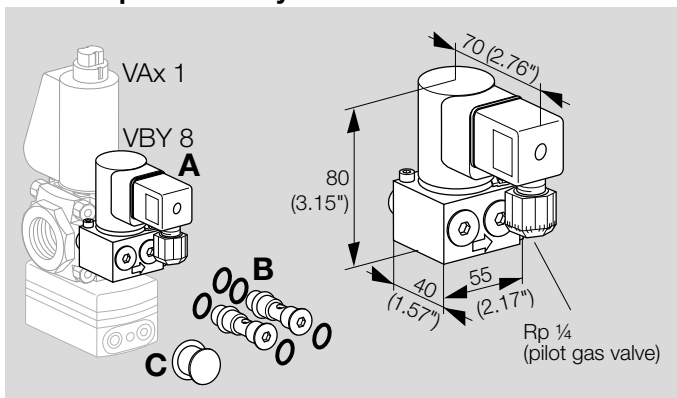

### Scope of delivery of VBY6 8I as bypass valve

**A** 1 x bypass valve VBY 8I,

**B** 2 x retaining screws with 4 x O-rings: both retaining screws have a bypass orifice,

**C** grease for O-rings.

### Scope of delivery of VBY6 8R as pilot gas valve

**A** 1 x pilot gas valve VBY 8R,

**B** 2 x retaining screws with 5 x O-rings: one retaining screw has a bypass orifice (2 x O-rings), the other does not (3 x O-rings),

 
**C** grease for O-rings.

### 7.4.4 Type code

<b>VBY</b>	Gas valve
<b>8</b>	Nominal size
<b>I</b>	For internal gas pick-up as bypass valve
<b>R</b>	For external gas pick-up as pilot gas valve
<b>Q</b>	Mains voltage 120 V AC, 50/60 Hz
<b>K</b>	Mains voltage 24 V DC
<b>W</b>	Mains voltage 230 V AC, 50/60 Hz
<b>6L</b>	Electrical connection via plug and socket with LED
<b>-R</b>	Attachment side of main valve: to the right
<b>-L</b>	Attachment side of main valve: to the left
<b>B</b>	Enclosed (separate packing unit)
<b>05</b>	Nozzle: 0.5 mm
<b>D</b>	With flow adjustment



## 7.5 Pressure test nipples



### Scope of delivery

 
1 x test nipple with 1 x profiled sealing ring,  
Rp 1/4: Order No. 74923390.

1 x test nipple (steel) with 1 x profiled sealing ring (Viton),  
1/4 NPT: Order No. 74921869.

## 7.6 Cable gland set

When wiring double solenoid valve VCx 1–3, the connection boxes are to be connected using a cable gland set.


The cable gland set can only be used if the connection boxes are at the same height and on the same side and if both valves are equipped either with or without a proof of closure switch.



VA 1, Order No. 74921985,  
VA 2, Order No. 74921986,  
VA 3, Order No. 74921987.

## 7.7 Attachment block VA 1–3

 For locked installation of pressure gauge or other accessories on the gas solenoid valve VAS 1–3.




Attachment block Rp 1/4, Order No. 74922228,  
Attachment block 1/4 NPT, Order No. 74926048.

Scope of delivery:

- A** 1 x attachment block,
- B** 2 x self-tapping screws for installation,
- C** 2 x O-rings.

## 7.8 Seal set for sizes 1–3

When retrofitting accessories or a second valVario control or when servicing, we recommend replacing the seals.

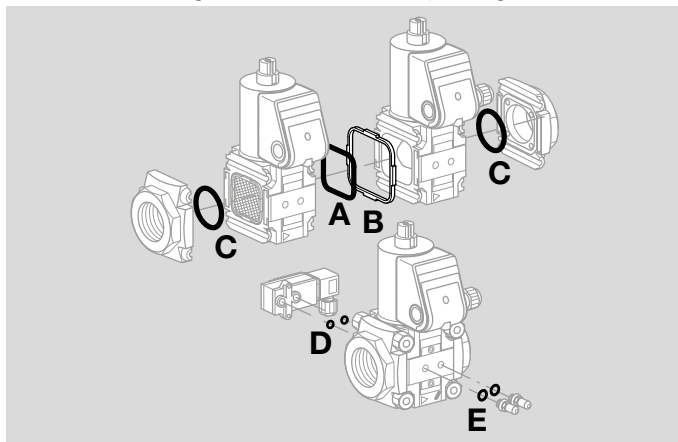

### VAS 1–3

VA 1, Order No. 74921988,  
VA 2, Order No. 74921989,  
VA 3, Order No. 74921990.

#### Scope of delivery:

- A** 1 x double block seal,
- B** 1 x retaining frame,
- C** 2 x O-rings (flange),
- D** 2 x O-rings (pressure switch),

for test nipple/screw plug:

- E** 2 x sealing rings (flat sealing),
- 2 x profiled sealing rings.


### VCS 1-3

VA 1, Order No. 74924978,  
VA 2, Order No. 74924979,  
VA 3, Order No. 74924980.

#### Scope of delivery:

- A** 1 x double block seal,
- B** 1 x retaining frame.

## 7.9 Differential pressure orifice

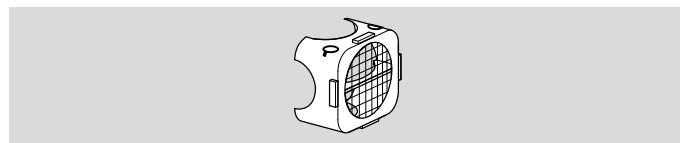


Size	Pipe DN	Differential pressure orifice			Order No.
		Colour	Outlet dia.		
1	15	yellow	18.5 mm	0.67"	74922238
1	20	green	25 mm	0.98"	74922239
1	25	transparent	30 mm	1.18"	74922240
2	40	transparent	46 mm	1.81"	74924907
3	50	transparent	58 mm	2.28"	74924908

If pressure regulator VAD/VAG/VAV 1 is retrofitted upstream of gas solenoid valve VAS 1, a DN 25 differential pressure orifice with outlet opening  $d = 30 \text{ mm}$  (1.18") must be inserted at the outlet of the pressure regulator.

In the case of pressure regulator VAx 115 or VAx 120, the DN 25 differential pressure orifice must be ordered separately and retrofitted, Order No. 74922240.


## 7.10 Measuring orifice VMO

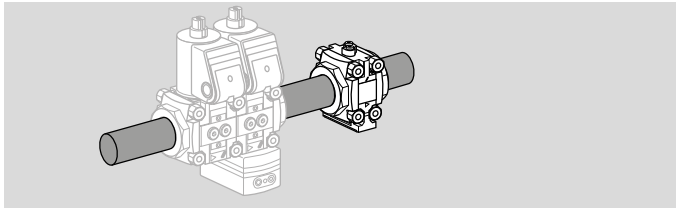

The measuring orifice VMO is designed to reduce the gas and air flow rates and is installed downstream of the valVario control. The measuring orifice is available with Rp internal thread (NPT internal thread) or flange to ISO 7005.

Technical Information VMO, see [www.docuthek.com](http://www.docuthek.com).


## 7.11 Filter module VMF

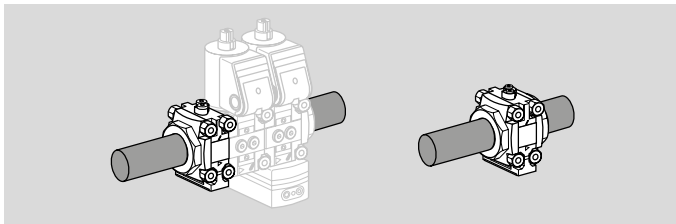

Using the filter module VMF, the gas flow upstream of the gas solenoid valve VAS and the air/gas ratio control is cleaned. The filter module is available with Rp internal thread (NPT internal thread) or flange to ISO 7005 and can also be supplied with fitted pressure switch as an option.

Technical Information VMF, see [www.docuthek.com](http://www.docuthek.com).


## 7.12 Fine-adjusting valve VMV

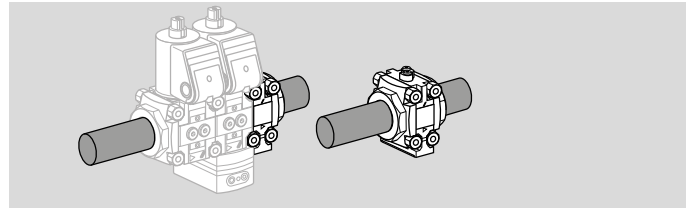

The flow rate is set using the fine-adjusting valve VMV. The fine-adjusting valve is available with Rp internal thread (NPT internal thread) or flange to ISO 7005.

Technical Information VMV, see [www.docuthek.com](http://www.docuthek.com).

## 7.13 Gas control line

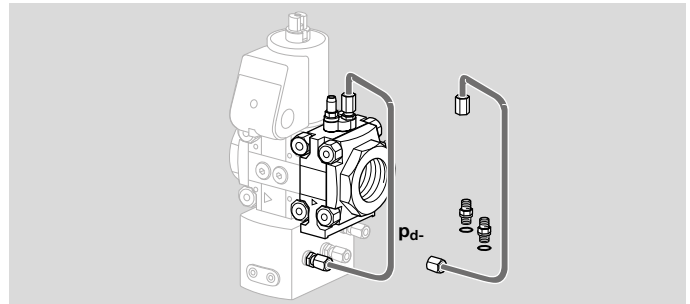

Fine-adjusting valve VMV can be installed on the flow rate regulator VAH for fine adjustment of the gas flow rate.

The gas control line for gas outlet pressure  $p_d$  is available with two 1/8" compression fittings.

Size 1: Order No. 74924458,

Size 2: Order No. 74924459,

Size 3: Order No. 74926055.

## 8 Technical data

### 8.1 Ambient conditions

Icing, condensation and dew in and on the unit are not permitted.

Avoid direct sunlight or radiation from red-hot surfaces on the unit. Note the maximum medium and ambient temperatures!

Avoid corrosive influences, e.g. salty ambient air or SO<sub>2</sub>.

The unit may only be stored/installed in enclosed rooms/buildings.

The unit is suitable for a maximum installation height of 2000 m AMSL.

Ambient temperature: -20 to +60°C (-4 to +140°F), no condensation permitted.

Long-term use in the upper ambient temperature range accelerates the ageing of the elastomer materials and reduces the service life (please contact manufacturer).

Storage temperature: -20 to +40°C (-4 to +104°F).

Enclosure: IP 65.

This unit is not suitable for cleaning with a high-pressure cleaner and/or cleaning products.

### 8.2 Mechanical data

Gas types: natural gas, LPG (gaseous), biogas (max. 0.1 %-by-vol. H<sub>2</sub>S) or clean air; other types of gas on request. The gas must be clean and dry in all temperature conditions and must not contain condensate.

Medium temperature = ambient temperature.

CE and FM approved, UL listed, max. inlet pressure  $p_{U_i}$ : 10–500 mbar (1–200 "WC).

FM approved, non operational pressure: 700 mbar (10 psig). ANSI/CSA approved: 350 mbar (5 psig).

Opening times:

VAx../N, quick opening:  $\leq 1$  s

VAx../N, quick closing:  $< 1$  s.

Valve housing: aluminium, valve seal: NBR.

Connection flanges with internal thread: Rp to ISO 7-1, NPT to ANSI/ASME.

Safety valve:

Class A, Group 2 pursuant to EN 13611 and EN 161, 230 V AC, 120 V AC, 24 V DC:

Factory Mutual (FM) Research Class: 7400 and 7411, ANSI Z21.21 and CSA 6.5, ANSI Z21.18 and CSA 6.3.

Turndown: up to 10:1.

Control class A to EN 88-1.

#### VAD

Outlet pressure  $p_d$ :

VAD..-25: 2.5–25 mbar (1–10 "WC),

VAD..-50: 20–50 mbar (8–19.7 "WC),

VAD..-100: 35–100 mbar (14–40 "WC).

Combustion chamber control pressure  $p_{sc}$  (connection  $p_{sa}$ ): -20 to +20 mbar (-7.8 to +7.8 "WC).

#### VAG

Outlet pressure  $p_d$ : 0.5–100 mbar (0.2–40 "WC).

Air control pressure  $p_{sa}$ : 0.5–100 mbar (0.2–40 "WC).

In applications with excess air,  $p_d$  and  $p_{sa}$  may be below the limit of 0.5 mbar. No situation which would jeopardize safety must arise. Avoid CO formation.

## Technical data

---

Adjusting range at low fire:  $\pm 5$  mbar ( $\pm 2$  "WC).

Transmission ratio of gas to air: 1:1.

The inlet pressure must always be higher than the air control pressure  $p_{sa}$  + pressure loss  $\Delta p$  + 5 mbar (2 "WC).

Connection options for air control pressure  $p_{sa}$ :

VAG..K: 1 1/8" coupling for plastic hose (internal dia.

3.9 mm (0.15"), external dia. 6.1 mm (0.24")),

VAG..E: 1 1/8" coupling with compression fitting for 6 x 1 tube,

VAG..A: 1 1/8" NPT adapter,

VAG..N: zero governor with breathing orifice.

### VAV

Outlet pressure  $p_d$ :

0.5–30 mbar (0.2–11.7 "WC).

Air control pressure  $p_{sa}$ :

0.4–30 mbar (0.15–11.7 "WC).

Combustion chamber control pressure  $p_{sc}$ :

-20 to +20 mbar (-7.8 to +7.8 "WC).

Min. control pressure differential  $p_{sa} - p_{sc}$ :

0.4 mbar (0.15 "WC).

Min. pressure differential  $p_d - p_{sc}$ :

0.5 mbar (0.2 "WC).

Adjusting range at low fire:

$\pm 1.5$  mbar ( $\pm 0.6$  "WC).

Transmission ratio of gas to air: 0.6:1 to 3:1.

The inlet pressure  $p_u$  must always be higher than the air control pressure  $p_{sa}$  x transmission ratio V + pressure loss  $\Delta p$  + 1.5 mbar (0.6 "WC).

Connection of air control pressure  $p_{sa}$  and combustion chamber control pressure  $p_{sc}$ :

VAV..K: 2 plastic hose couplings (internal dia. 3.9 mm (0.15");

external dia. 6.1 mm (0.24"))

or

VAV..E: 2 1/8" compression fittings for 6 x 1 tube

or

VAV..A: 2 1/8" NPT adapters.

### VAH, VRH

The inlet pressure must always be higher than the differential air pressure  $\Delta p_{sa}$  + max. gas pressure on burner + pressure loss  $\Delta p$  + 5 mbar (2 "WC).

Differential air pressure  $\Delta p_{sa}$  ( $p_{sa} - p_{sa}$ ) = 0.6–50 mbar (0.24–19.7 "WC).

Differential gas pressure  $\Delta p_d$  ( $p_d - p_d$ ) = 0.6–50 mbar (0.24–19.7 "WC).

Adjusting range at low fire:  $\pm 5$  mbar ( $\pm 2$  "WC).

Transmission ratio of gas to air: 1:1.

Connection of the air control pressure  $p_{sa}$ :

VAH..E, VRH..E: 3 1/8" couplings with compression fitting for 6 x 1 tube

or

VAH..A, VRH..A: 3 1/8" NPT adapters.

## 8.3 Electrical data

Mains voltage:

230 V AC, +10/-15%, 50/60 Hz;

200 V AC, +10/-15%, 50/60 Hz;

120 V AC, +10/-15%, 50/60 Hz;

100 V AC, +10/-15%, 50/60 Hz;

24 V DC,  $\pm 20\%$ .

Power consumption:

Cable gland: M20 x 1.5.

## Technical data

Electrical connection: cable with max. 2.5 mm<sup>2</sup> (AWG 12) or plug with socket to EN 175301-803.

Duty cycle: 100%.

Power factor of the solenoid coil:  $\cos \varphi = 0.9$ .

Type	Voltage	Power
VAX 1	24 V DC	25 W
VAX 1	100 V AC	25 W (26 VA)
VAX 1	120 V AC	25 W (26 VA)
VAX 1	200 V AC	25 W (26 VA)
VAX 1	230 V AC	25 W (26 VA)
VAX 2, VAX 3	24 V DC	36 W
VAX 2, VAX 3	100 V AC	36 W (40 VA)
VAX 2, VAX 3	120 V AC	40 W (44 VA)
VAX 2, VAX 3	200 V AC	40 W (44 VA)
VAX 2, VAX 3	230 V AC	40 W (44 VA)
VBY	24 V DC	8 W
VBY	120 V AC	8 W
VBY	230 V AC	9.5 W

Contact rating of closed position indicator:

Type	Voltage	Current (resistive load)	
		min.	max.
VAX..S, VCX..S	12–250 V AC, 50/60 Hz	100 mA	3 A
VAX..G, VCX..G	12–30 V DC	2 mA	0.1 A


Switching frequency of closed position indicator: max. 5 x per minute.

Switching current	Switching cycles*	
	$\cos \varphi = 1$	$\cos \varphi = 0.6$
0.1	500,000	500,000
0.5	300,000	250,000
1	200,000	100,000
3	100,000	–

\* Limited to max. 200,000 cycles for heating systems.


## 9 Dimensions

### 9.1 Rp internal thread, ISO flange

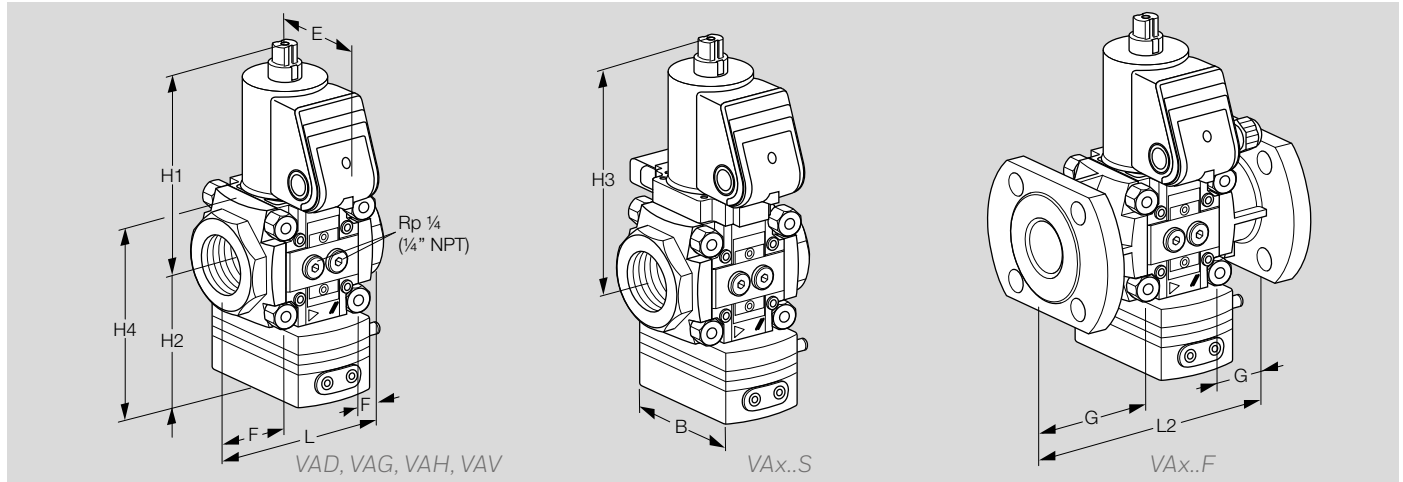

Type	Connection		Dimensions [mm]										Weight [kg]
	Rp	DN	L	L2	E	F	G	H1	H2	H3	H4	B	
VAx 115	1/2	15	75	–	75	15	–	143	82	161	117	97	1.8
VAH 115	1/2	15	75	–	75	15	–	143	100	161	135	97	2
VAx 120	3/4	20	91	–	75	23	–	143	82	161	117	97	1.9
VAH 120	3/4	20	91	–	75	23	–	143	100	161	135	97	2.1
VAx 125	1	25	91	–	75	23	–	143	82	161	117	97	1.9
VAH 125	1	25	91	–	75	23	–	143	100	161	135	97	2.1
VAx 240	1 1/2	40	127	200	85	29	66	170	112	191	162	125	4.4
VAH 240	1 1/2	40	127	200	85	29	66	170	132	191	182	125	4.7
VAx 350	2	50	155	230	85	36	74	180	135	201	196	160	6.1
VAH 350	2	50	155	230	85	36	74	180	156	201	217	160	6.4

9.2 NPT internal thread, ANSI flange

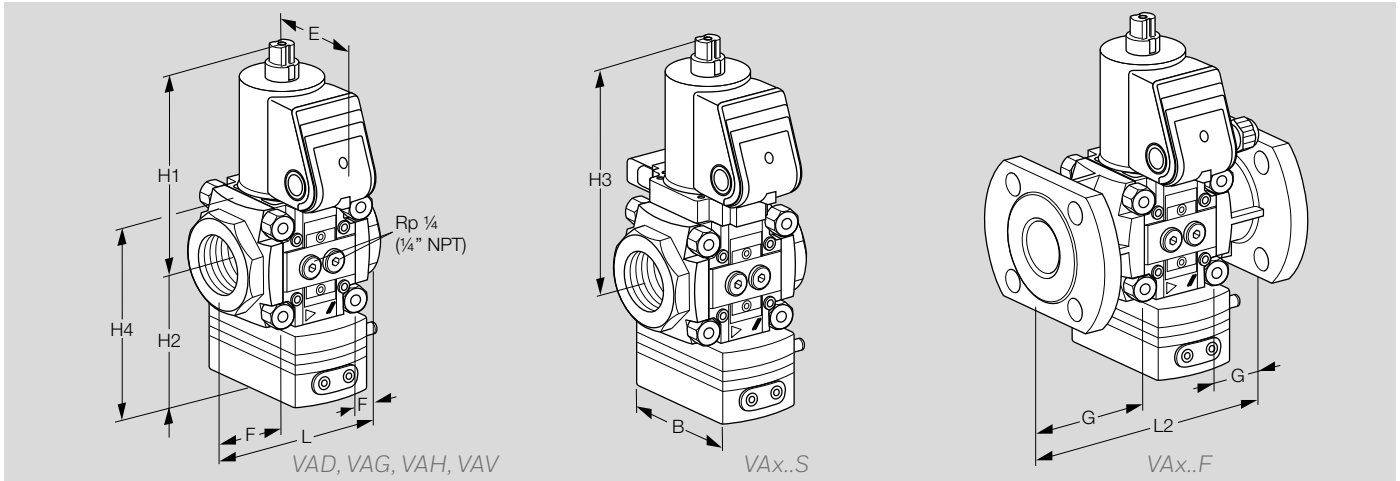

Type	Connection		Dimensions [inch]										Weight [lbs]
	NPT	DN	L	L2	E	F	G	H1	H2	H3	H4	B	
VAx 115	1/2	15	2.9	–	2.9	0.6	–	5.6	3.2	6.3	4.6	3.8	4.0
VAH 115	1/2	15	2.9	–	2.9	0.6	–	5.6	3.9	6.3	5.3	3.8	4.4
VAx 120	3/4	20	3.6	–	2.9	0.9	–	5.6	3.3	6.3	4.6	3.8	4.2
VAH 120	3/4	20	3.6	–	2.9	0.9	–	5.6	3.9	6.3	5.3	3.8	4.6
VAx 125	1	25	3.6	–	2.9	0.9	–	5.6	3.3	6.3	4.6	3.8	4.2
VAH 125	1	25	3.6	–	2.9	0.9	–	5.6	3.9	6.3	5.3	3.8	4.6
VAx 240	1 1/2	40	5.0	7.9	3.3	1.1	2.6	6.7	4.4	7.5	6.4	4.9	9.7
VAH 240	1 1/2	40	5.0	7.9	3.3	1.1	2.6	6.7	5.2	7.5	7.2	4.9	10.4
VAx 350	2	50	6.1	9.1	3.3	1.4	2.9	7.0	5.3	7.9	7.7	6.3	13.4
VAH 350	2	50	6.1	9.1	3.3	1.4	2.9	7.0	6.1	7.9	8.5	6.3	14.1



## **10 Converting units**

See [www.adlatus.org](http://www.adlatus.org)

## 11 Safety-specific characteristic values for SIL and PL

Certificates – see [www.docuthek.com](http://www.docuthek.com).

For a glossary of terms, see page 55 (Glossary).

<b>For SIL</b>	
Suitable for Safety Integrity Level	SIL 1, 2, 3
Diagnostic coverage DC	0
Type of subsystem	Type A to EN 61508-4, 3.5.12
Mode of operation	High demand mode pursuant to EN 61508-4, 3.5.12
<b>For PL</b>	
Suitable for Performance Level	PL a, b, c, d, e
Category	B, 1, 2, 3, 4
Common cause failure CCF	> 65
Application of essential safety requirements	Satisfied
Application of tried-and-tested safety requirements	Satisfied
<b>For SIL and PL</b>	
B <sub>10d</sub> value of VAD, VAG, VAV, VAH 1	10,094,360 operating cycles
B <sub>10d</sub> value of VAD, VAG, VAV, VAH 2	8,229,021 operating cycles
B <sub>10d</sub> value of VAD, VAG, VAV, VAH 3	6,363,683 operating cycles
Hardware fault tolerance (1 component/switch) HFT	0
Hardware fault tolerance (2 components/switches, redundant operation) HFT	1
Safe failure fraction SFF	> 90%
Fraction of undetected common cause failures β	± 2%

### Relationship between the Performance Level (PL) and the Safety Integrity Level (SIL)

PL	SIL
a	–
b	1
c	1
d	2
e	3

### 11.1 Determining the PFH<sub>D</sub> value, λ<sub>D</sub> value and MTTF<sub>d</sub> value

$$PFH_D = \lambda_D = \frac{1}{MTTF_d} = \frac{0,1}{B_{10d}} \times n_{op}$$

PFH<sub>D</sub> = Probability of dangerous failure (HDM = high demand mode) [1/hour]

PFD<sub>avg</sub> = Average probability of a dangerous failure of the safety function on demand (LDM = low demand mode)

λ<sub>D</sub> = Mean dangerous failure rate [1/hour]

MTTF<sub>d</sub> = Mean time to dangerous failure [hours]

n<sub>op</sub> = Demand rate (mean number of annual operations) [1/hour]

## 11.2 Designed lifetime

Max. service life under operating conditions in accordance with EN 13611, EN 161 for VAD, VAG, VAV, VAH: designed lifetime after date of production, plus max. ½ year in storage prior to first use, or once the given number of operating cycles has been reached, depending on which is achieved first:

Type	Designed lifetime	
	Switching cycles	Time (years)
VAX 110 to 225	500,000	10
VAX 232 to 365	200,000	10
VRH	–	10

## 11.3 Use in safety-related systems

For systems up to SIL 3 pursuant to EN 61508 and PL e pursuant to ISO 13849.

The devices are suitable for single-channel systems (HFT = 0) up to SIL 2/PL d, and up to SIL 3/PL e when two redundant devices are installed in a double-channel architecture (HFT = 1), provided that the complete system complies with the requirements of EN 61508/ISO 13849.

## 12 Safety information in accordance with EN 61508-2

### 12.1 Scope of application

Regulators with solenoid valves are designed for shut-off, and thanks to the servo technology, for precise control of the gas supply to gas burners and gas appliances.

For further information, see page 4 (Application) and on the certificates, see [www.docuthek.com](http://www.docuthek.com).

### 12.2 Product description

See page 14 (Function) and page 4 (Application) for information about the product description and the device functions.

### 12.3 Reference documents

Operating instructions, see [www.docuthek.com](http://www.docuthek.com).

Certificate, see [www.docuthek.com](http://www.docuthek.com).

A web app for spare parts is available at [www.adlatus.org](http://www.adlatus.org).

A web app selecting the correct product is available at [www.adlatus.org](http://www.adlatus.org).

### 12.4 Applicable standards

Standards used for certification, see [www.docuthek.com](http://www.docuthek.com).

### 12.5 Safety function

The safety function involves interrupting a gas flow by adopting the safety position using the internal energy ac-

cumulator within the closing time and guaranteeing internal and external tightness.

### 12.6 Safety instructions concerning operating limits

The function is only guaranteed when used within the specified limits – see page 44 (Technical data) or operating instructions at [www.docuthek.com](http://www.docuthek.com).

### 12.7 Installation and commissioning

Installation and commissioning procedures are described in the operating instructions.

### 12.8 Maintenance/Checks

Internal and external tightness and the function once per annum, twice per annum for biogas.

Further information can be found in the operating instructions.

### 12.9 Troubleshooting

In the event of faults after maintenance work or function checks: remove the unit and return it to the manufacturer for inspection.

### 12.10 Safety instructions concerning design verification

A Failure Mode and Effects Analysis has been carried out to assess possible design-related failures and to classify these into safe and dangerous failures.

## **12.11 Characteristic safety data/SIL capability**

See page 50 (Safety-specific characteristic values for SIL and PL) and page 44 (Technical data).


## **12.12 Mode of operation**

The regulators with solenoid valve are suitable for a 100% duty cycle.

## **13 Maintenance cycles**

At least once a year, at least twice a year in the case of biogas.

If the flow rate drops, clean the strainer.

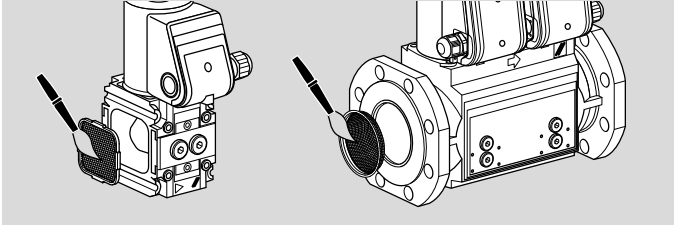

## 14 Glossary

### 14.1 Diagnostic coverage DC

Measure of the effectiveness of diagnostics, which may be determined as the ratio between the failure rate of detected dangerous failures and the failure rate of total dangerous failures

NOTE: Diagnostic coverage can exist for the whole or parts of a safety-related system. For example, diagnostic coverage could exist for sensors and/or logic system and/or final elements. Unit: %

see EN ISO 13849-1

### 14.2 Mode of operation

High demand mode or continuous mode

Operating mode, where the frequency of demands for operation made on a safety-related system is greater than one per year or greater than twice the proof-test frequency

see EN 61508-4

### 14.3 Category

Classification of the safety-related parts of a control system in respect of their resistance to faults and their subsequent behaviour in the fault condition, and which is achieved by the structural arrangement of the parts, fault detection and/or by their reliability

see EN ISO 13849-1

### 14.4 Common cause failure CCF

Failures of different items, resulting from a single event, where these failures are not consequences of each other

see EN ISO 13849-1

### 14.5 Fraction of undetected common cause failures $\beta$

Fraction of undetected failures of redundant components due to a single event, whereby these failures are not based on mutual causes

NOTE:  $\beta$  is expressed as a fraction in the equations and as a percentage elsewhere.

see EN 61508-6

### 14.6 $B_{10d}$ value

Mean number of cycles until 10% of the components fail dangerously

see EN ISO 13849-1

### 14.7 $T_{10d}$ value

Mean time until 10% of the components fail dangerously

see EN ISO 13849-1

### 14.8 Hardware fault tolerance HFT

A hardware fault tolerance of N means that N + 1 is the minimum number of faults that could cause a loss of the safety function

see IEC 61508-2

### 14.9 Mean dangerous failure rate $\lambda_D$

Mean rate of dangerous failures during operation time ( $T_{10d}$ ). Unit: 1/h

see EN ISO 13849-1

### **14.10 Safe failure fraction SFF**

Fraction of safe failures related to all failures, which are assumed to appear

see EN 13611/A2

### **14.11 Probability of dangerous failure $\text{PFH}_D$**

Value describing the likelihood of dangerous failure per hour of a component for high demand mode or continuous mode. Unit: 1/h

see EN 13611/A2

### **14.12 Mean time to dangerous failure $\text{MTTF}_D$**

Expectation of the mean time to dangerous failure

see EN ISO 13849-1:2008

### **14.13 Demand rate $n_{Op}$**

Mean number of annual operations

see EN ISO 13849-1

### **14.14 Average probability of dangerous failure on demand $\text{PFD}_{avg}$**

(LDM = 1 – 10 switching cycles/year)

Average probability of a dangerous failure of the safety function on demand (LDM = low demand mode)

see EN 61508-6



## For more information

The Honeywell Thermal Solutions family of products includes Honeywell Combustion Safety, Eclipse, Exothermics, Hauck, Kromschroder and Maxon. To learn more about our products, visit [ThermalSolutions.honeywell.com](https://ThermalSolutions.honeywell.com) or contact your Honeywell Sales Engineer.

Elster GmbH  
Strotheweg 1, D-49504 Lotte  
T +49 541 1214-0  
[hts.lotte@honeywell.com](mailto:hts.lotte@honeywell.com)  
[www.kromschroeder.com](http://www.kromschroeder.com)

© 2020 Elster GmbH

We reserve the right to make technical modifications in the interests of progress.

